Fastener Tightening Specifications

Application	Specification	
	Metric	English
Cargo Area Rear Trim Panel Retaining Hooks	2.0 N·m	18 lb in
Centre Sill Plate Retaining Torx Screw	2.0 N·m	18 lb in
Rear Sill Plate retaining Screw	2.0 N·m	18 lb in
Quarter Trim Panel Retaining Torx Screw	2.0 N·m	18 lb in
Rear Quarter Upper Trim Panel Retaining Screws	2.0 N·m	18 lb in
Sunshade Retaining Screws	2.0 N·m	7 lb in
Upper Centre Pillar Trim Panel Torx Screw	2.0 N·m	18 lb in
Hinge Pillar Trim Retaining Torx screw	2.0 N·m	18 lb in
Assist Handle Retaining Screws	2.0 N·m	18 lb in
Sunshade Retaining Screw	2.0 N·m	18 lb in
Windshield Garnish Moulding Retaining Torx Screw	2.0 N·m	18 lb in
Upper Centre Pillar Retaining Torx Screw	2.0 N·m	18 lb in
Rear Quarter Upper Retaining Torx Screw	2.0 N·m	18 lb in
Rear Quarter Upper Lower Section Retaining Torx Screw	2.0 N·m	18 lb in
Rear Quarter Lower Retaining Torx Screw	2.0 N·m	18 lb in
Child Restraint Anchor Retaining Bolt	22 N·m	16 lb ft
Assist Handle Retaining Screws	2.0 N·m	18 lb in

© 2010 General Motors Corporation. All rights reserved.

Front Side Door Trim Panel Replacement

Removal Procedure

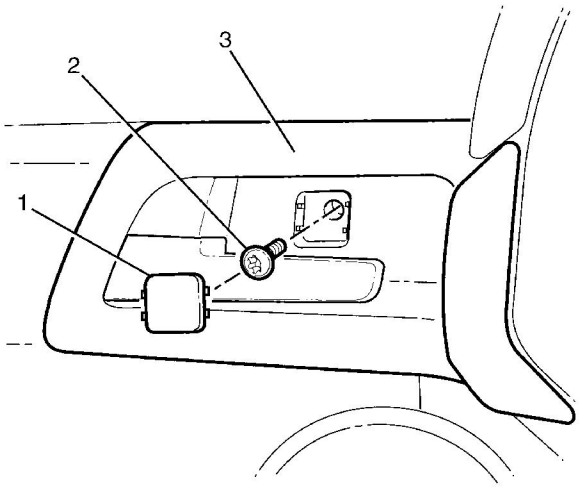

1. Using a suitable tool remove the inside door handle to door retaining screw cover (1) from the door trim panel (3).
2. Remove the inside door handle to door retaining screw (2).

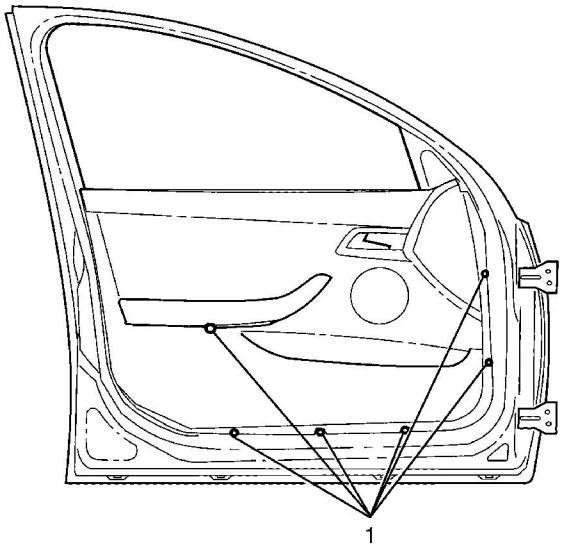

3. Remove the door trim panel to door retaining screws (1).

© 2010 General Motors Corporation. All rights reserved.

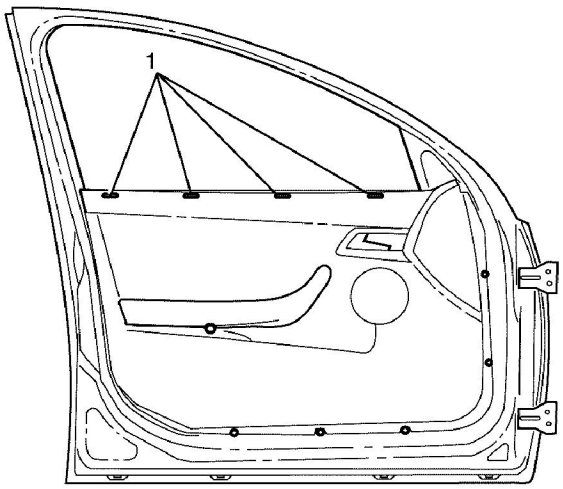

4. Detach the top of the door trim panel in order to release the inner belt seal clips (1).

   Note: Firmly pull the armrest handle outwards to release the door trim panel to door retaining clips.

5. Remove the door trim panel from the door to allow access to door handle cable, door lock cable.

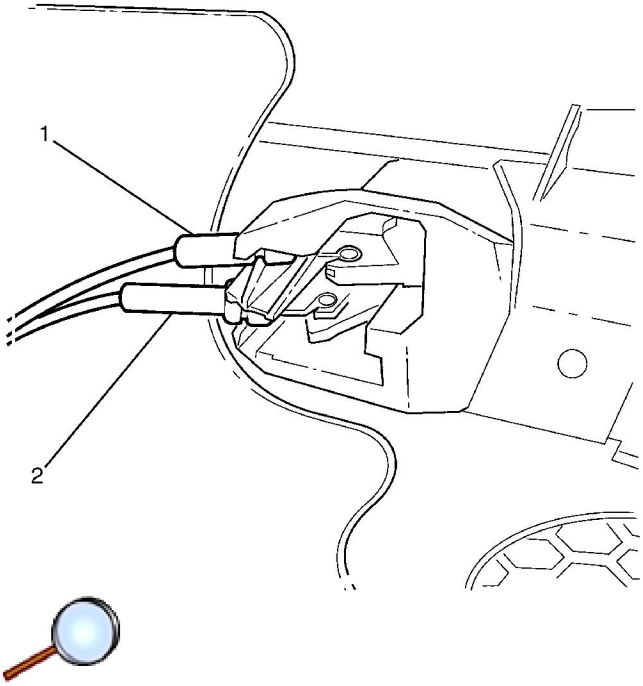

   Note: The door handle and lock cables slide out and lift up to remove from the door trim panel.

6. Disconnect the inside door handle cable (1) and door lock cable (2) from the door trim panel.

7. Remove the door trim panel from the door.

Installation Procedure

Note: The green retaining clips are along the front edge and the white retaining clips are along the back edge.

1. Make sure that all of the retaining clips are on the door trim panel and not still attached to the sheetmetal.

Note: Do not fully install the door trim panel at this stage. The inside door handle cable and door lock cable have to be attached first.

2. Position the door trim panel to the door.

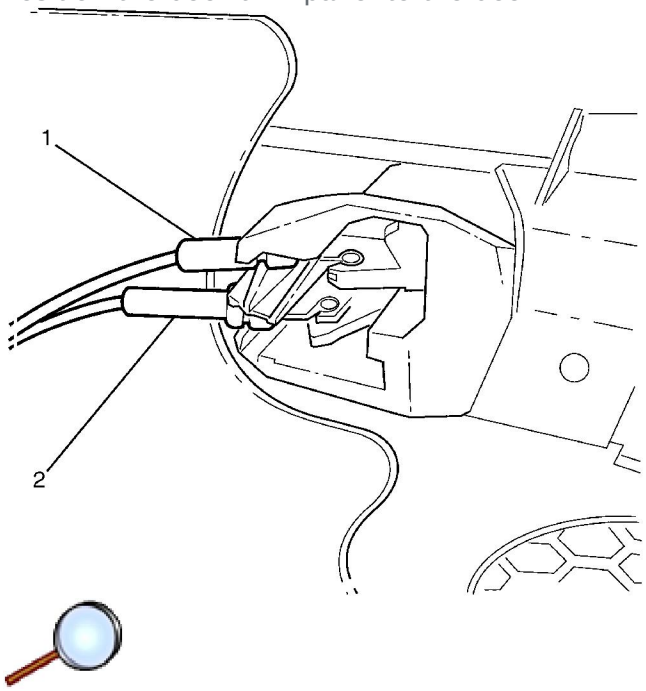

Note: The door handle and lock cables slide down and in to the door trim panel to install.

3. Connect the inside door handle cable (2) and door lock cable (1) to the door trim panel.

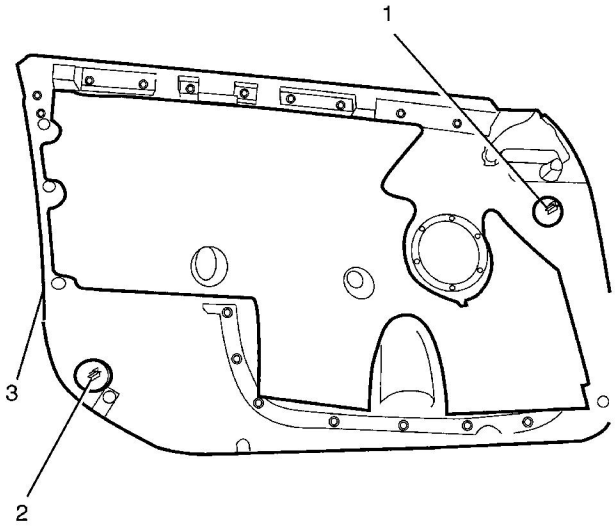

Note: Datum pins (1, 2) assist in aligning the door trim panel to the door.

Apply pressure around the door trim panel (3) to secure the retainers to the door.

4. Position the door trim panel (3) to the door.

Caution: Refer to Fastener Caution in the Preface section.

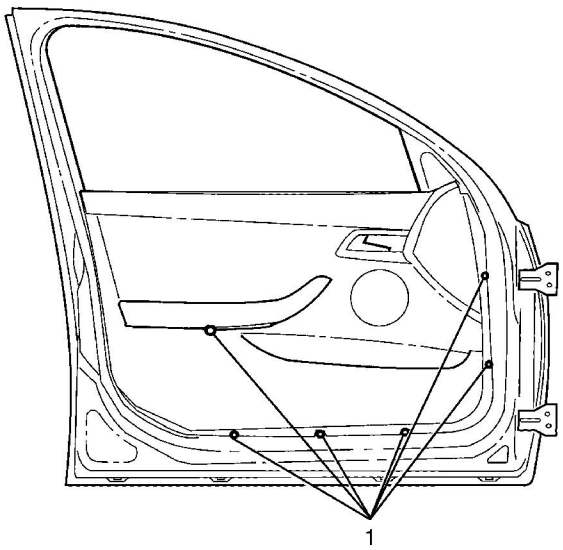

5. Install the door trim panel to door retaining screws (1) and tighten to **3 N·m (27 lb in)**.

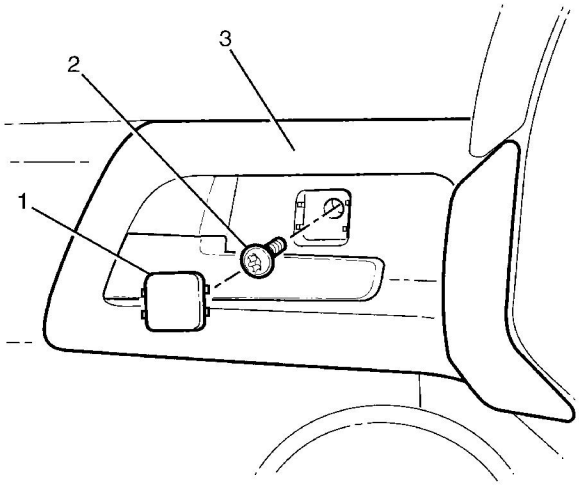

6. Install the inside door handle to door trim panel retaining screw (2) and tighten to **3 N·m (27 lb in)**.
7. Install the inside door handle to door retaining screw cover (1) to the door trim panel (3).

Rear Side Door Trim Panel Replacement

Removal Procedure

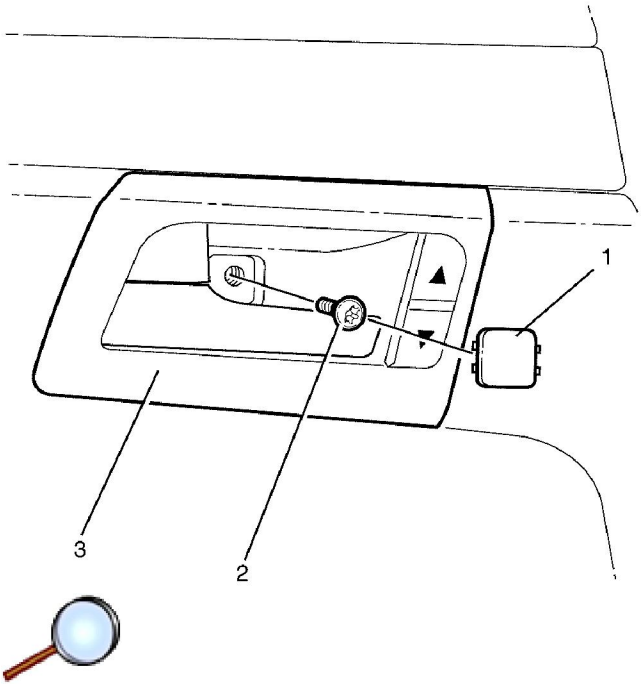

1. Using a suitable tool remove the inside door handle to door retaining screw cover (3) from the door trim panel (1).
2. Remove the inside door handle to door retaining screw (2).

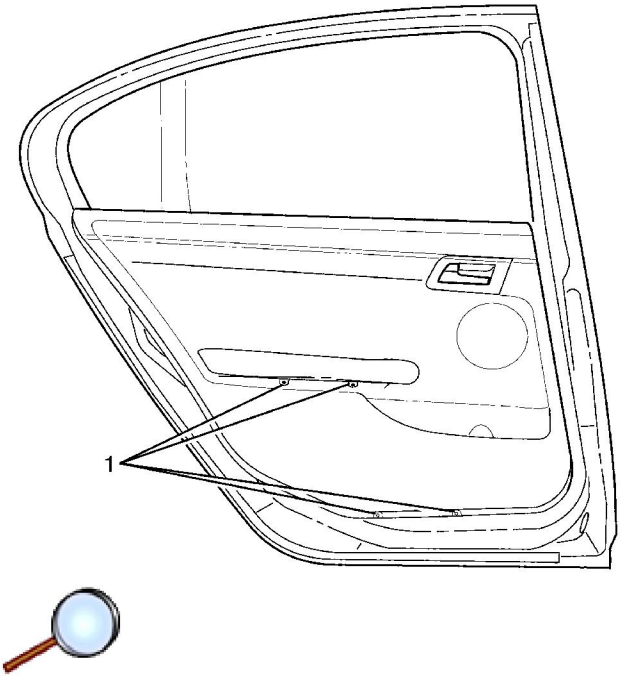

3. Remove the door trim panel to door retaining screws (1).

© 2010 General Motors Corporation. All rights reserved.

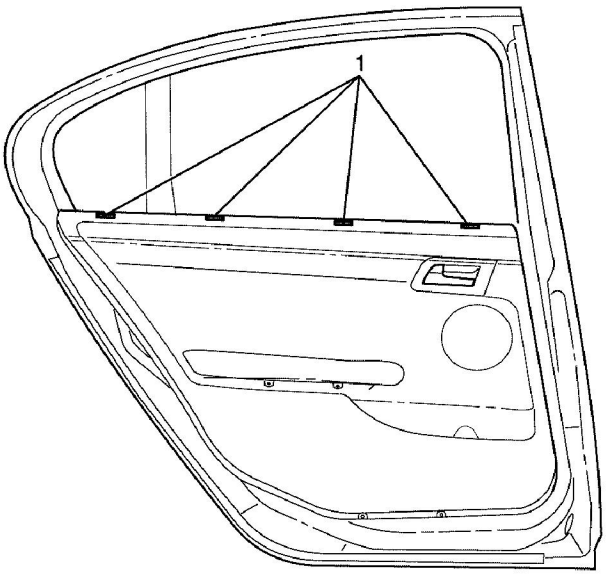

4. Detach the top of the door trim panel in order to release the inner belt seal clips (1).

   Note: Firmly pull the armrest handle outwards to release the door trim panel to door retaining clips.

5. Remove the door trim panel from the door to allow access to door handle cable and door lock cable.

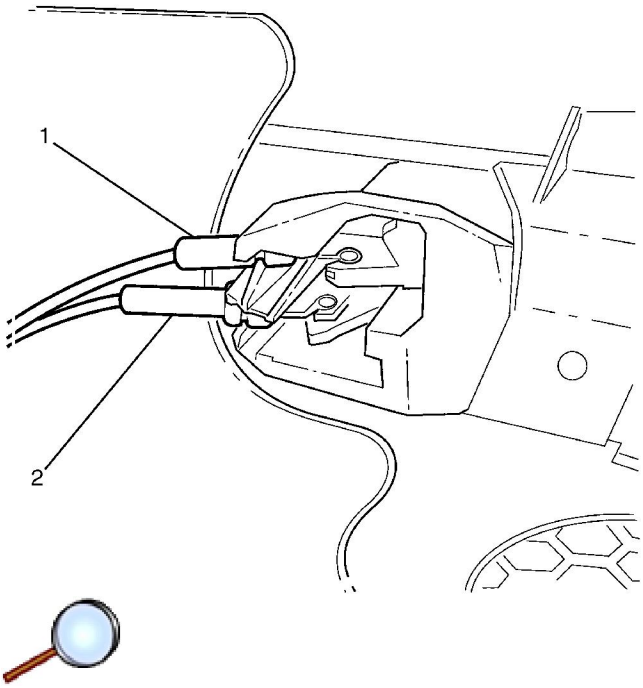

   Note: The door handle and lock cables slide out and lift up to remove from the door trim panel.

6. Disconnect the inside door handle cable (1) and door lock cable (2) from the door trim panel.

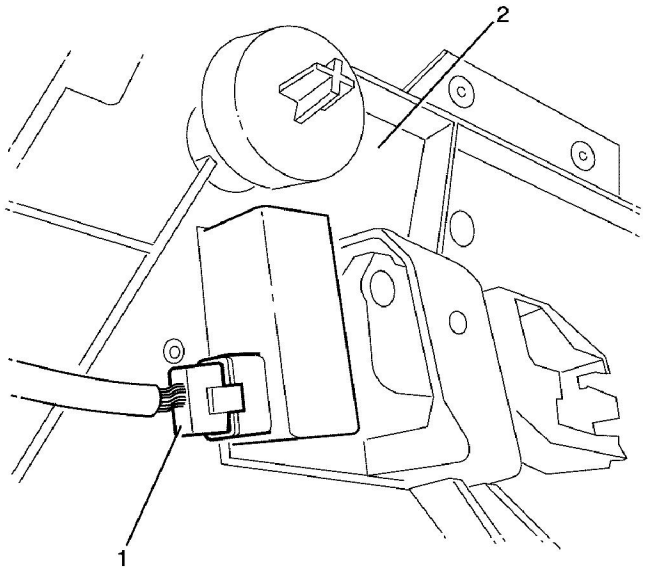

7. Disconnect the window switch (1) from the door trim panel (2).
8. Remove the door trim panel (2) from the door.

Installation Procedure

Note: The green retaining clips are along the front edge and the white retaining clips are along the back edge.

1. Make sure that all of the retaining clips are on the door trim panel and not still attached to the door sheetmetal.

   Note: Do not fully install the door trim panel at this stage. The inside door handle cable, door lock cable and window switch have to be attached first.

2. Position the door trim panel to the door.

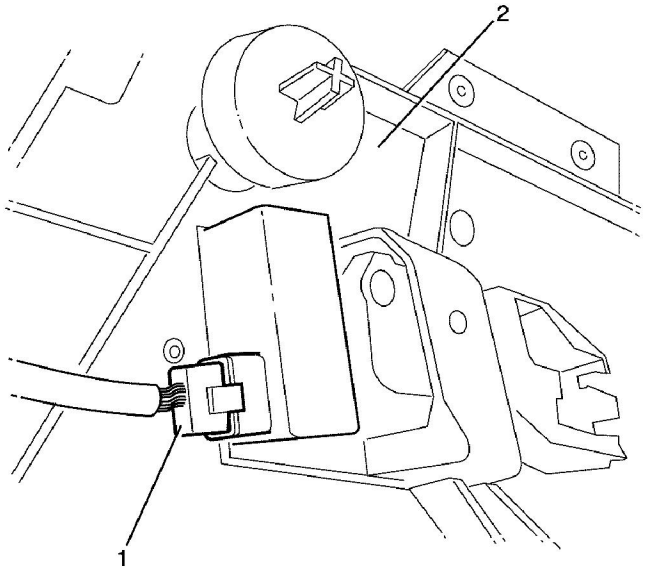

3. Connect the window switch (1) to the door trim panel (2).

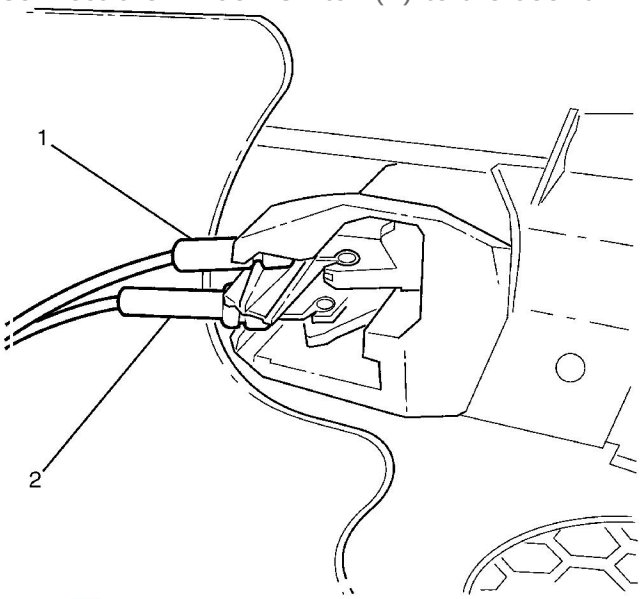

4. Connect the inside door handle cable (2) and door lock cable (1) to the door trim panel.

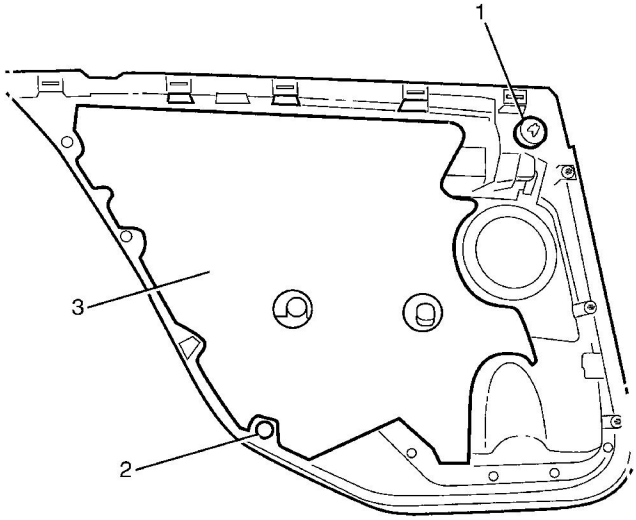

Note: Datum pins (1, 2) assist in aligning the door trim panel to the door.

Apply pressure around the door trim panel (3) to secure the retainers to the door.

5. Position the door trim panel (3) to the door.

Caution: Refer to Fastener Caution in the Preface section.

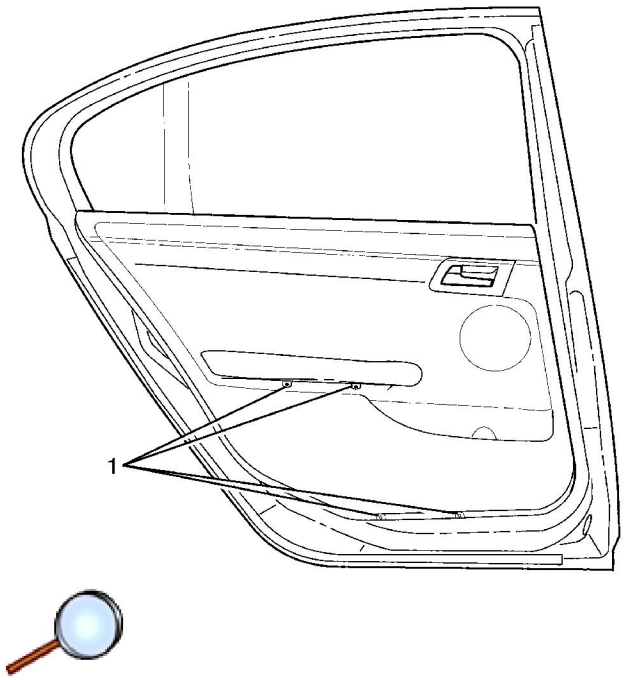

6. Install the door trim panel to door retaining screws (1) and tighten to **3 N·m (27 lb in)**.

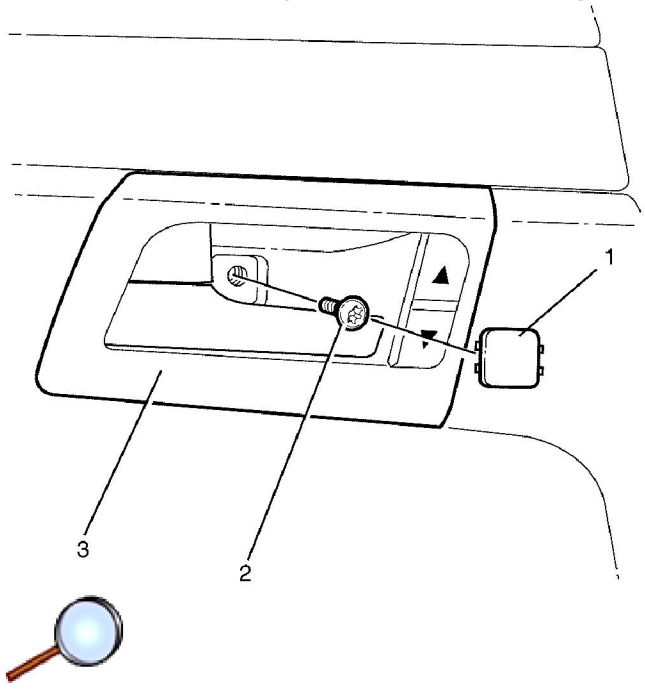

7. Install the inside door handle to door retaining screw (2) and tighten to **3 N·m (27 lb in)**.
8. Install the inside door handle to door retaining screw cover (3) to the door trim panel (1).

Front Side Door Water Deflector Replacement

Removal Procedure

1. Remove the door trim panel. Refer to Front Side Door Trim Panel Replacement.
2. Remove the speaker. Refer to Radio Front Side Door Lower Speaker Replacement.

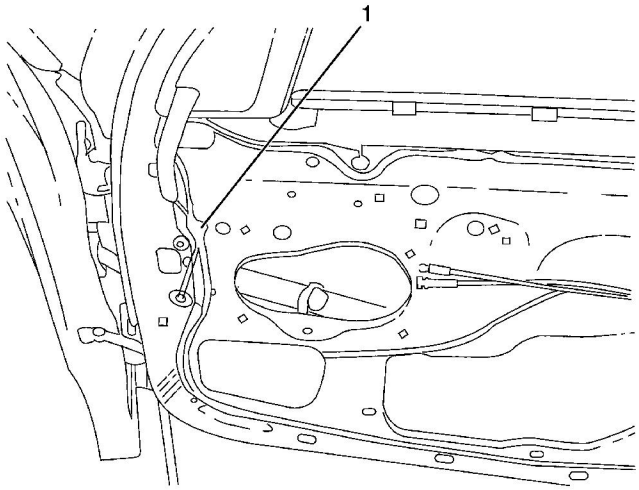

3. Detach the wiring harness to door retaining clip (1).

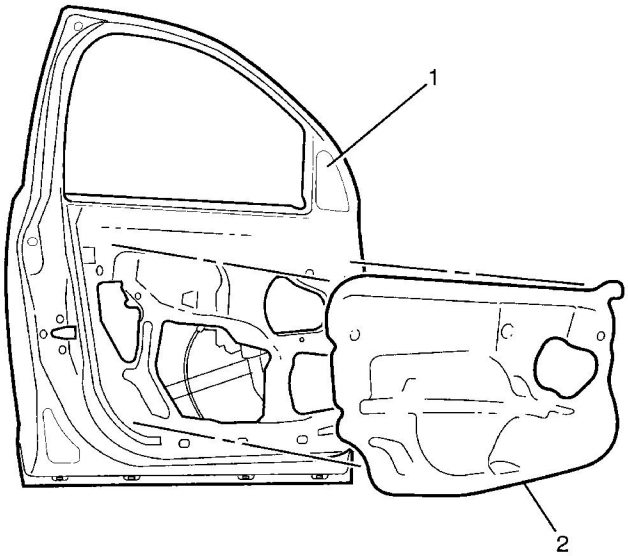

Important: Pull the water deflector (2) from the door (1) to release the adhesive bond.

© 2010 General Motors Corporation. All rights reserved.

4. Remove the water deflector (2) from the door (1).

Installation Procedure

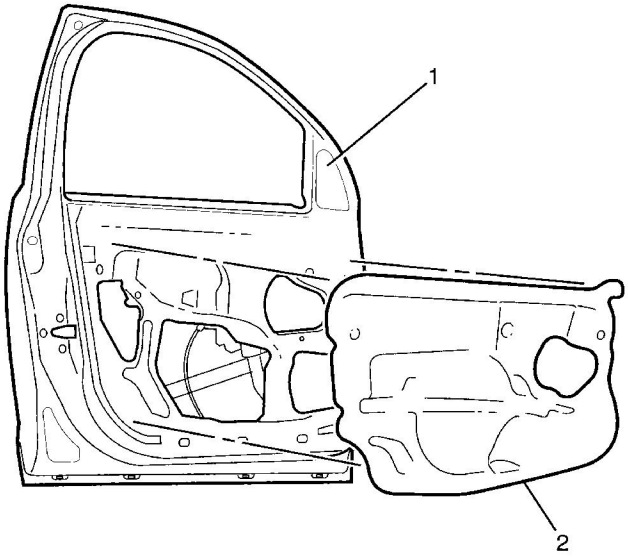

Important: Firmly press the water deflector (2) where adhesive is applied to make sure of a water tight seal to the door (1).

1. Install the water deflector (2) to the door (1).

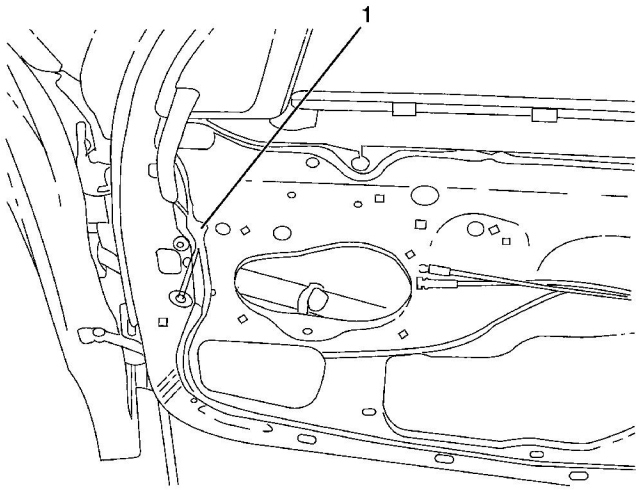

2. Attach the wiring harness to door retaining clip (1).
3. Install the speaker. Refer to Front Side Door Trim Panel Replacement.
4. Install the door trim panel. Refer to Front Side Door Trim Panel Replacement.

Rear Side Door Water Deflector Replacement

Removal Procedure

1. Remove the door trim panel. Refer to Rear Side Door Trim Panel Replacement.
2. Remove the speaker. Refer to Radio Rear Side Door Speaker Replacement.

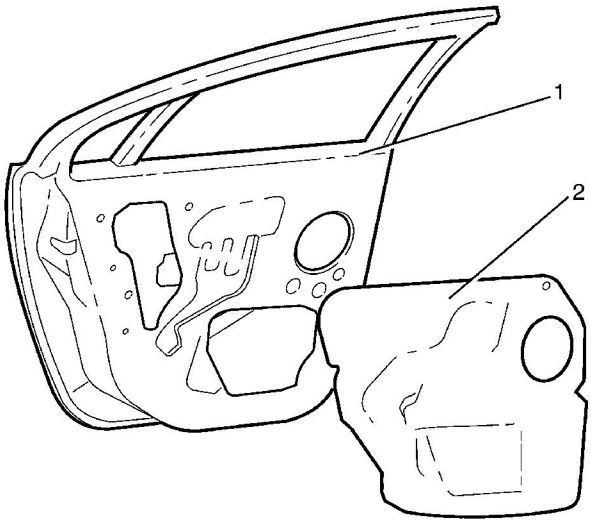

Important: Pull the water deflector (2) from the door (1) to release the adhesive bond.

3. Remove the water deflector (2) from the door (1).

Installation Procedure

© 2010 General Motors Corporation. All rights reserved.

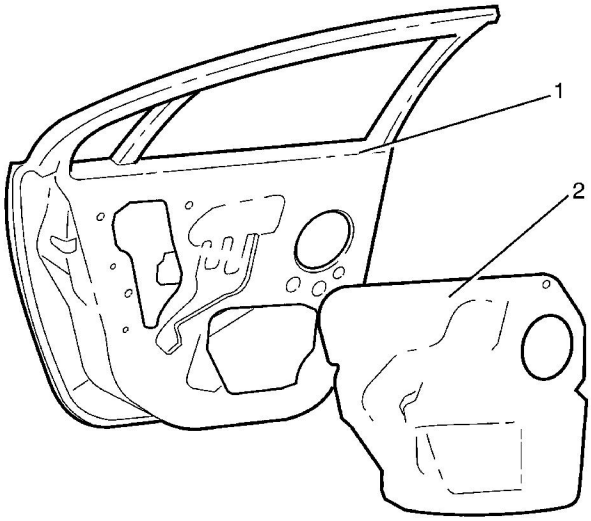

Important: Firmly press the water deflector (2) where adhesive is applied to make sure of a water tight seal to the door (1).

1. Install the water deflector (2) to the door (1).
2. Install the speaker. Refer to Radio Rear Side Door Speaker Replacement.
3. Install the door trim panel. Refer to Rear Side Door Trim Panel Replacement.

Side Door Sill Nameplate Replacement

Removal Procedure

1. Open the front and rear door.

   Warning: Refer to Safety Glasses Warning in the Preface section.

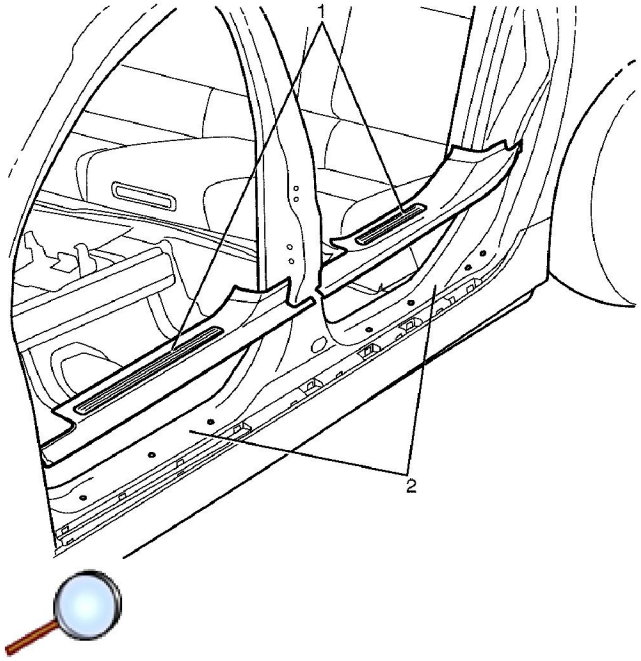

   Note: When removing the sill name plates (1), make sure the retaining clips are retained in the sill name plates (1).

2. Using a suitable tool carefully remove the sill name plates (1) from the vehicle (2).

Installation Procedure

© 2010 General Motors Corporation. All rights reserved.

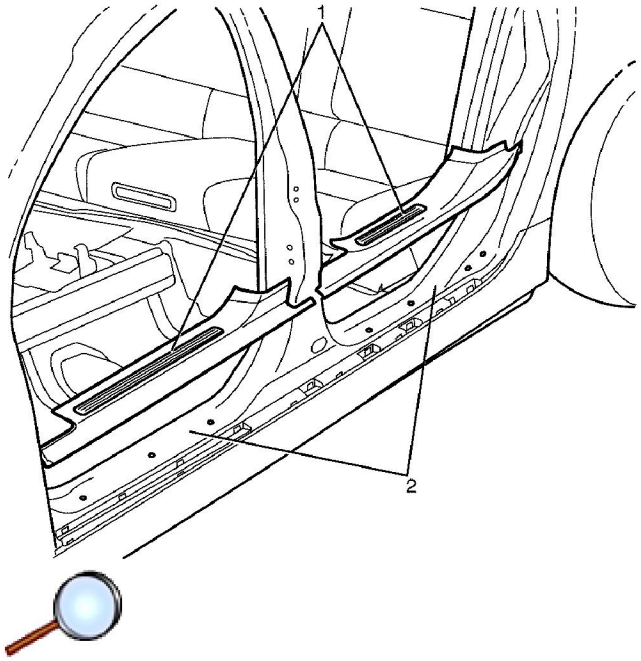

Note: Before installing the rear side door sill name plates (1), make sure all of the retaining clips are not damaged, if damaged replace as necessary.

Note: Make sure the lip of the weatherstrip sits over the sill plate.

Note: Firmly push down on the sill plates (1) to install. Listen for an audible click to confirm fitting.

1. Install the rear side door sill name plates (1) to the vehicle (2).
2. Close the front and rear door.

Body Hinge Pillar Trim Panel Replacement

Removal Procedure

1. Remove the front sill trim plate. Refer to Front Side Door Sill Plate Replacement.
2. Remove the instrument panel outer trim cover. Refer to Instrument Panel Outer Trim Cover Replacement.

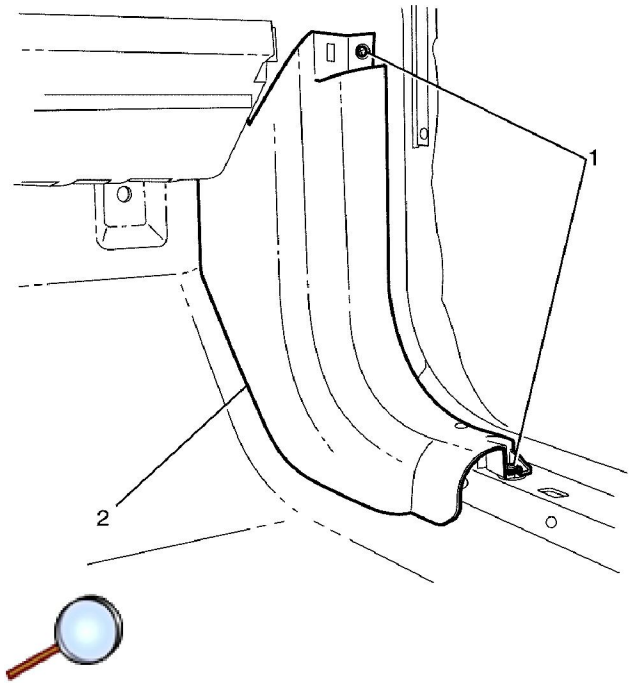

3. Remove the two retaining torx screws (1) from the body hinge pillar trim (2).
4. Disengage the body hinge pillar trim pulling upwards and then rearwards.
5. Remove the body hinge pillar trim assembly.
6. If required, remove the two nut inserts.

Installation Procedure

Note: Ensure the body hinge pillar trim clip is correctly engaged in the A-pillar inner panel.

1. Engage body hinge pillar trim (2) into the A-pillar sheetmetal.

Caution: Refer to Fastener Caution in the Preface section.

© 2010 General Motors Corporation. All rights reserved.

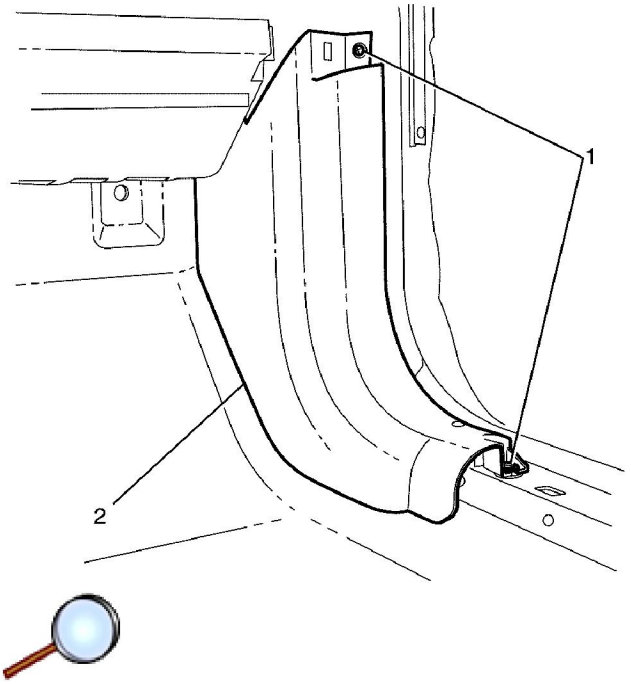

2. Install the two body hinge pillar trim (2) retaining torx screws (1) and tighten to **2.0 N·m (18 lb in)**.
3. Install the instrument panel outer trim cover. Refer to Instrument Panel Outer Trim Cover Replacement.
4. Install the front sill trim plate. Refer to Front Side Door Sill Plate Replacement.

Rear Compartment Trim Panel Replacement

Removal Procedure

1. Remove the convenience net (if fitted). Refer to Rear Compartment Stowage Tray Net Replacement .
2. Remove the rear carpet. Refer to Rear Compartment Floor Panel Carpet Replacement .

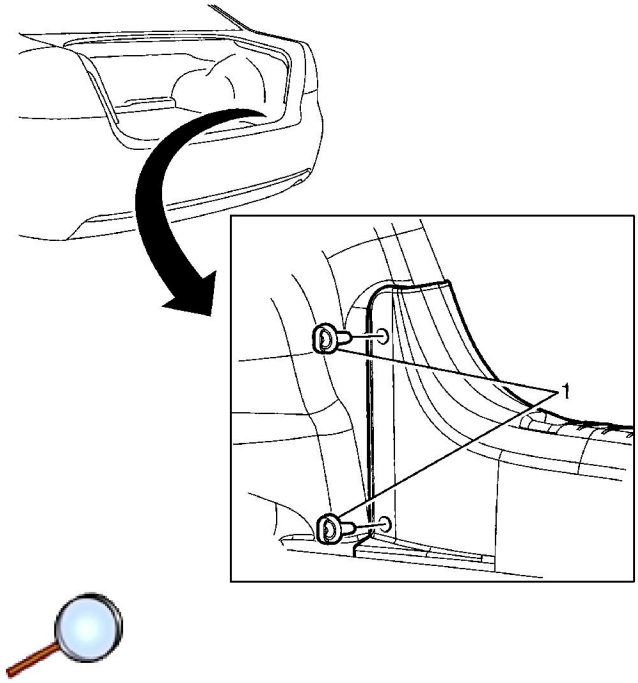

3. Remove the four convenience net retaining hooks (1) or the four fir tree retainers.

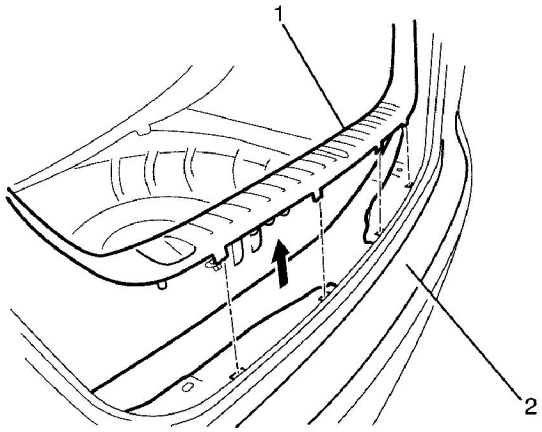

Important: Pull the end panel (1) to disengage the end panel retaining pins.

© 2010 General Motors Corporation. All rights reserved.

4. Remove the end panel (1) from the vehicle (2).

Installation Procedure

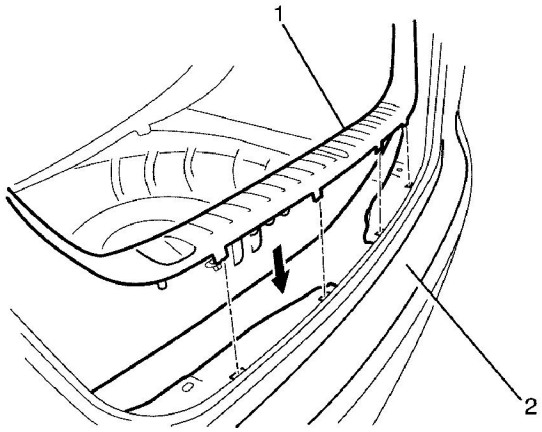

Important: Push the end panel (1) to engage the end panel retaining pins.

1. Install the end panel (1) to the vehicle (2).

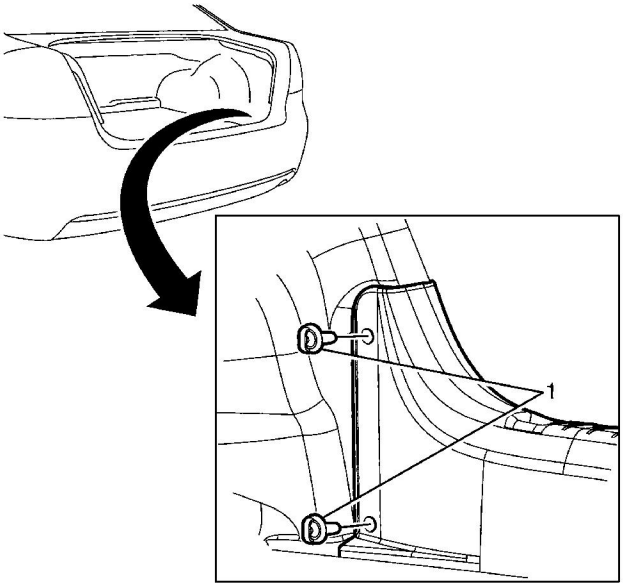

2. Install the four convenience net retaining hooks (1) or the four fir tree retainers.
3. Install the rear carpet. Refer to Rear Compartment Floor Panel Carpet Replacement .
4. Install the convenience net (if fitted). Refer to Rear Compartment Stowage Tray Net Replacement .

Door Sill Plate Replacement

Removal Procedure

1. Remove the centre pillar lower trim. Refer to Center Pillar Lower Trim Panel Replacement.
2. Remove the front sill trim plate. Refer to Front Side Door Sill Plate Replacement.
3. Remove the rear sill trim plate. Refer to Rear Side Door Sill Plate Replacement.

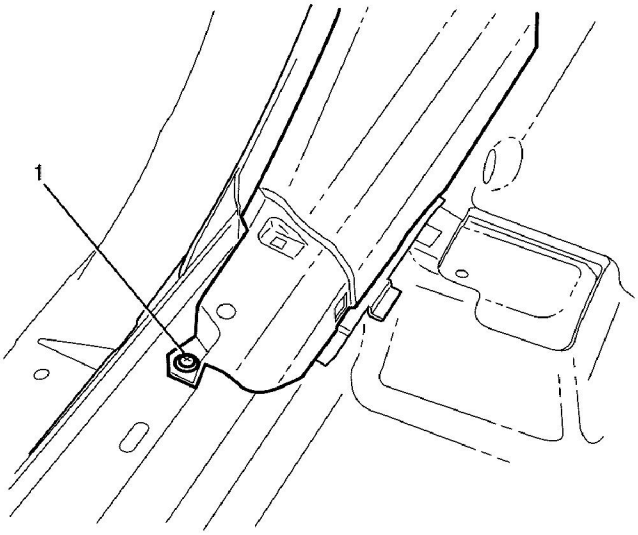

4. Remove the centre trim panel torx screw (1).

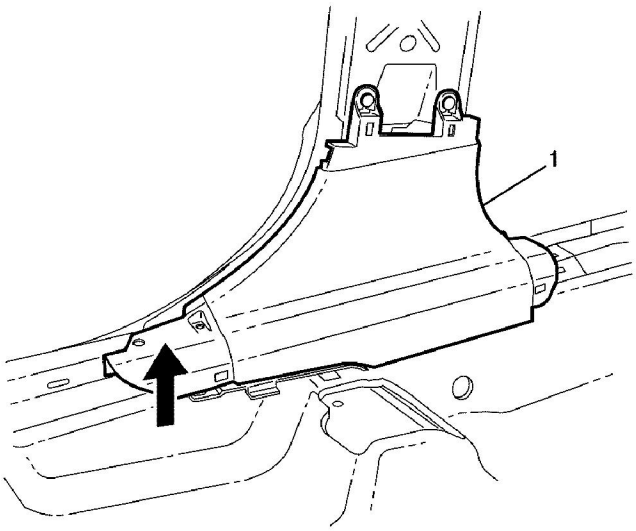

Note: When removing the centre sill trim panel, ensure the two white retaining clips at the

© 2010 General Motors Corporation. All rights reserved.

top of the part remain in the sheet metal.

5. Remove the centre sill trim panel (1).

Installation Procedure

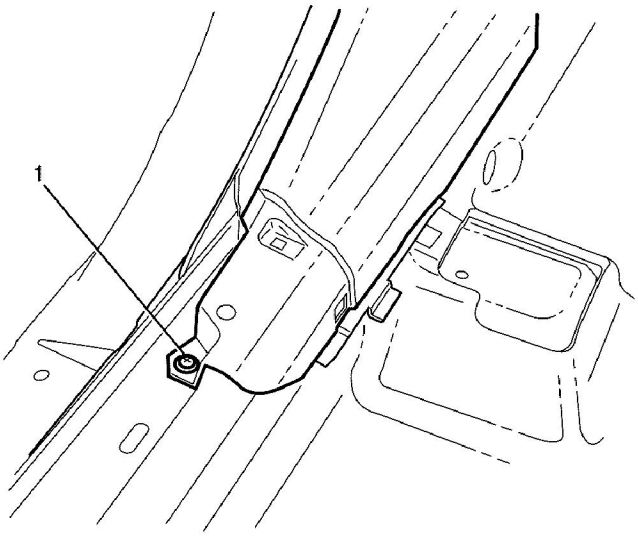

Note: Before installing trims, ensure all retaining clips are not damaged, if damaged replace as necessary.

1. Install the centre sill trim panel.

Caution: Refer to Fastener Caution in the Preface section.

2. Install the centre sill trim panel torx screw (1) and tighten to **2.0 N·m (18 lb in)**.
3. Install the rear sill trim plate. Refer to Rear Side Door Sill Plate Replacement.
4. Install the front sill trim plate. Refer to Front Side Door Sill Plate Replacement.
5. Install the centre pillar lower trim. Refer to Center Pillar Lower Trim Panel Replacement.

Front Side Door Sill Trim Plate Replacement

Removal Procedure

1. Remove the front seat outer trim cover. Refer to Seat Cushion Outer Trim Panel Replacement.

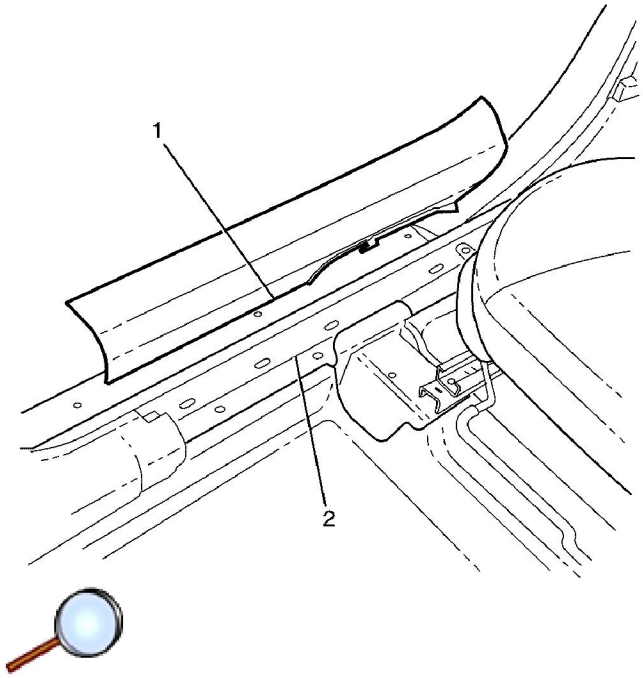

Important: While carrying out the following procedure, take care not to damage the sill panel trim (1).

2. Carefully disengage the front sill panel trim (1) from the sill (2).
3. Remove the front sill panel trim (1).

Installation Procedure

© 2010 General Motors Corporation. All rights reserved.

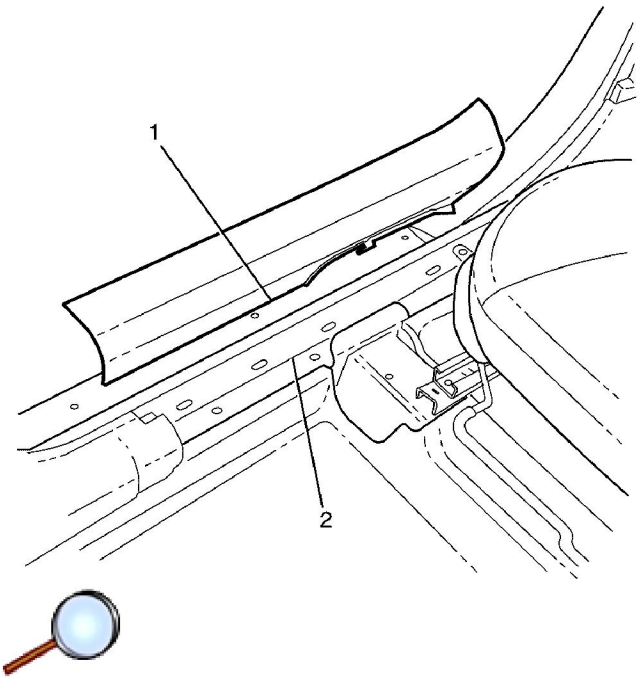

1. Install the front sill trim panel (1) to the sill (2).
2. Remove the front seat outer trim cover. Refer to Seat Cushion Outer Trim Panel Replacement.

Rear Side Door Sill Trim Plate Replacement

Removal Procedure

1. Remove the rear seat cushion. Refer to Rear Seat Cushion Replacement.

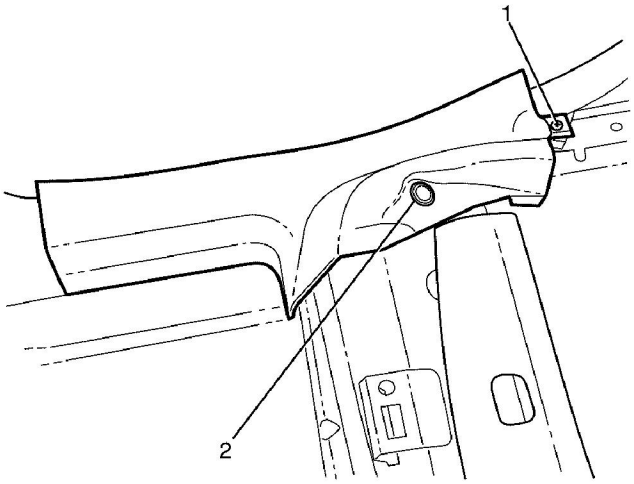

2. Remove the retaining torx screw (1) from the rear sill panel trim.
3. Remove the retaining pin (2) and remove the rear sill panel trim by pulling from the lower edge and disengaging the retaining clips.

Installation Procedure

1. Install the rear sill panel trim.

   Caution: Refer to Fastener Caution in the Preface section.

© 2010 General Motors Corporation. All rights reserved.

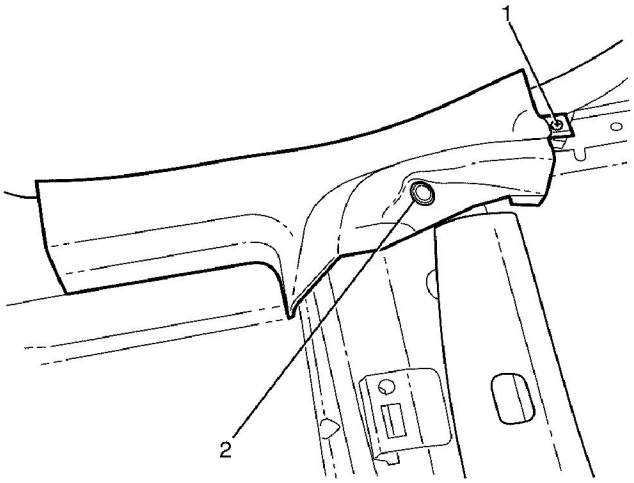

2. Install the rear sill panel trim retaining torx screw (1) and tighten to **2.0 N·m (18 lb in)**.
3. Install the rear sill panel trim retaining pin (2).
4. Install the rear seat cushion. Refer to Rear Seat Cushion Replacement.

Rear Compartment Side Trim Panel Replacement

Removal Procedure (Up to 13 Jun 2007)

1. Remove the convenience net (if fitted). Refer to Rear Compartment Stowage Tray Net Replacement.
2. Remove the rear carpet. Refer to Rear Compartment Floor Panel Carpet Replacement.
3. Remove the rear end panel trim. Refer to Rear Compartment Trim Panel Replacement.
4. Remove the seat back assembly. Refer to Rear Seat Back Replacement.

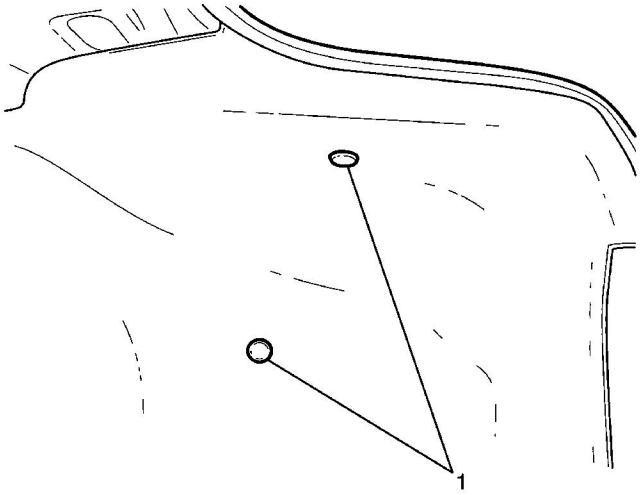

5. Remove the two carpet retainers (1) securing the rear quarter panel side carpet. The left side is shown, the right side is similar.

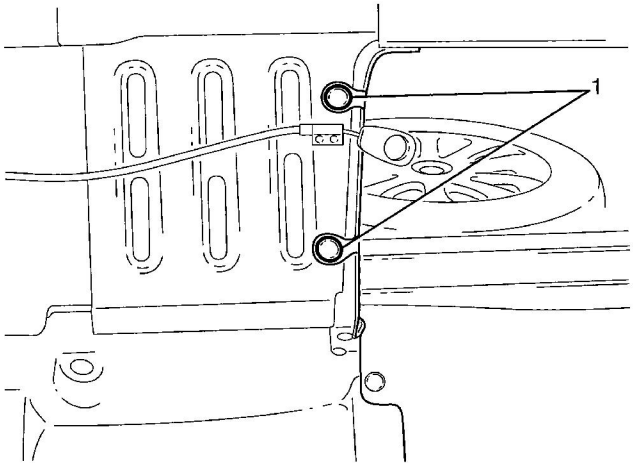

© 2010 General Motors Corporation. All rights reserved.

6. Remove the two carpet retainers (1) securing the rear quarter panel side carpet, which are located inside of the vehicle.

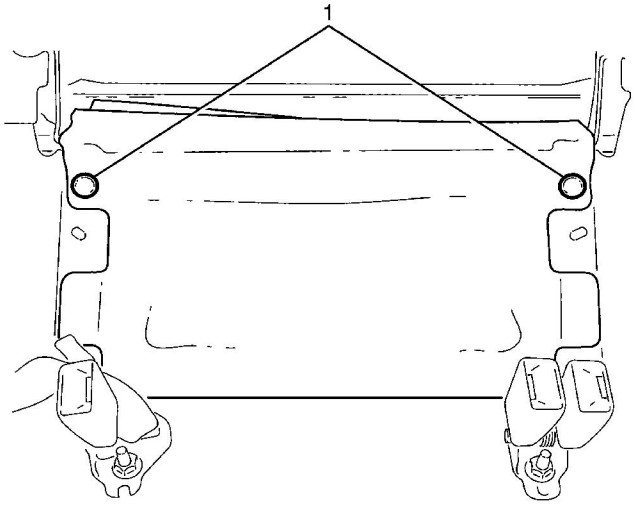

7. Remove the two carpet retainers (1) securing the centre panel carpet.

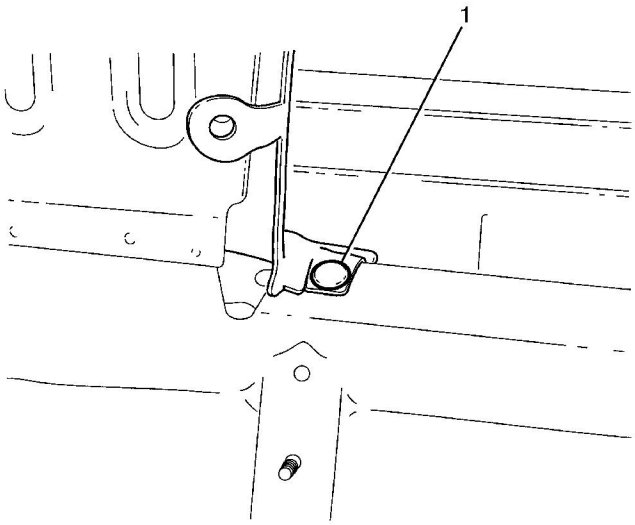

8. Remove the quarter panel side carpet retainer (1) securing the rear quarter panel side carpet.
9. Remove the quarter panel side carpet.
10. Carry out this procedure for the opposite side.

Installation Procedure (Up to 13 Jun 2007)

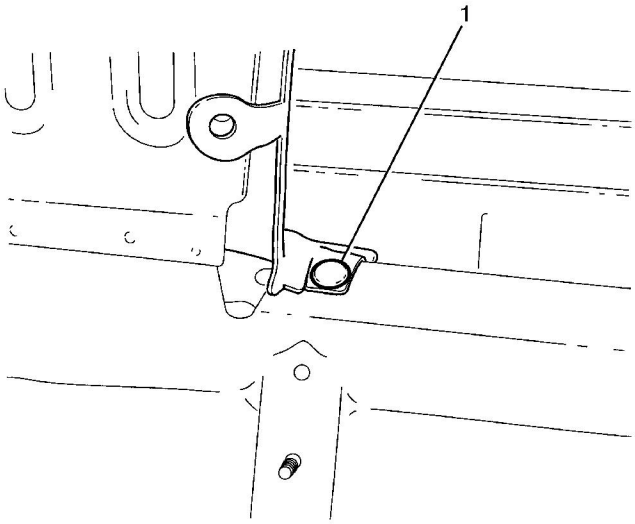

1. Install the quarter panel side carpet.
2. Install the quarter panel side carpet retainer (1).

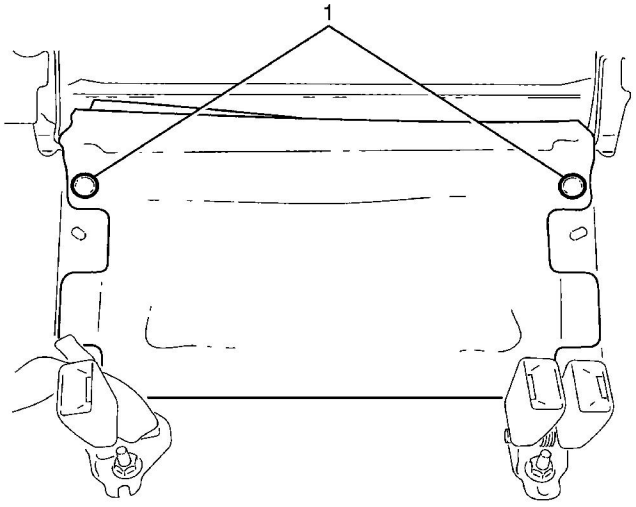

3. Install the two carpet retainers (1) to secure the centre panel carpet.

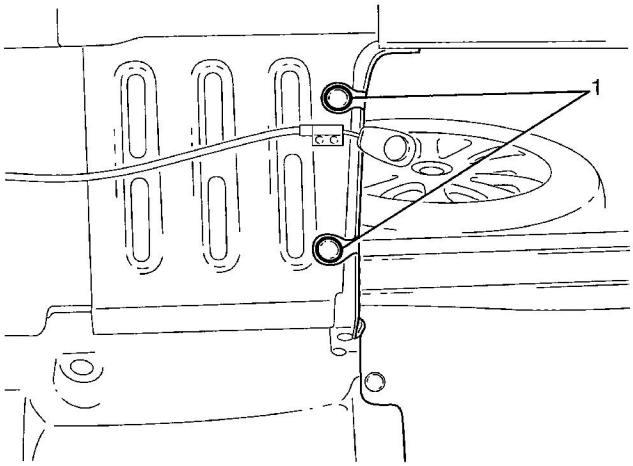

4. Install the two carpet retainers (1) securing the rear quarter panel side carpet.

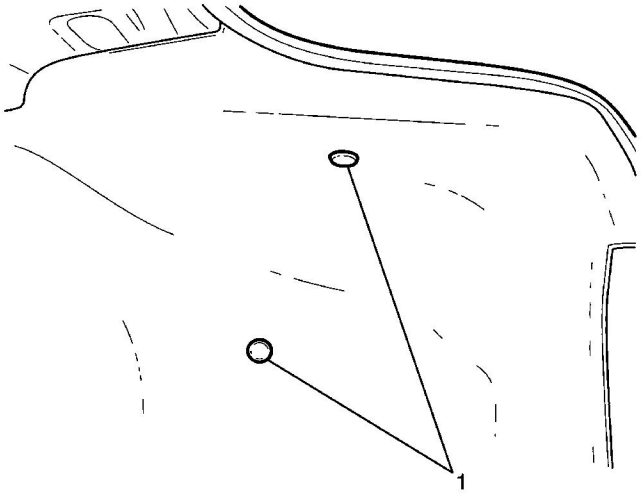

5. Install the two carpet retainers securing the rear quarter panel side carpet.
6. Ensure the carpet has a flush finish with the quarter panel.
7. Install the seat back assembly. Refer to Rear Seat Back Replacement.
8. Install the rear end panel trim. Refer to Rear Compartment Trim Panel Replacement.
9. Install the rear carpet. Refer to Rear Compartment Floor Panel Carpet Replacement.
10. Install the convenience net. Refer to Rear Compartment Stowage Tray Net Replacement.

Removal Procedure (From 13 Jun 2007)

1. Remove the convenience net (if fitted). Refer to Rear Compartment Stowage Tray Net Replacement.
2. Remove the rear carpet. Refer to Rear Compartment Floor Panel Carpet Replacement.

3. Remove the rear end panel trim. Refer to Rear Compartment Trim Panel Replacement.
4. Remove the seat back assembly. Refer to Rear Seat Back Replacement.

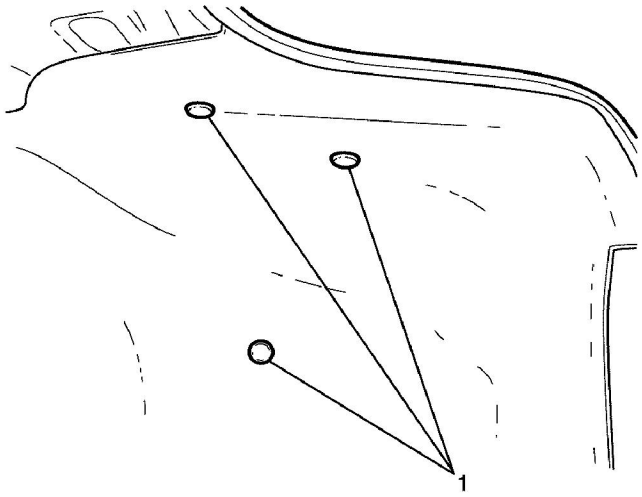

5. Remove the three carpet retainers (1) securing the rear quarter panel side carpet. The right side is shown, the left side is similar.

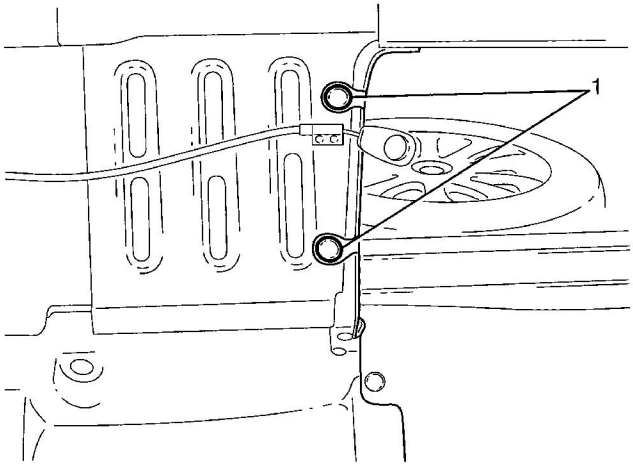

6. Remove the two carpet retainers (1) securing the rear quarter panel side carpet, which are located inside of the vehicle.

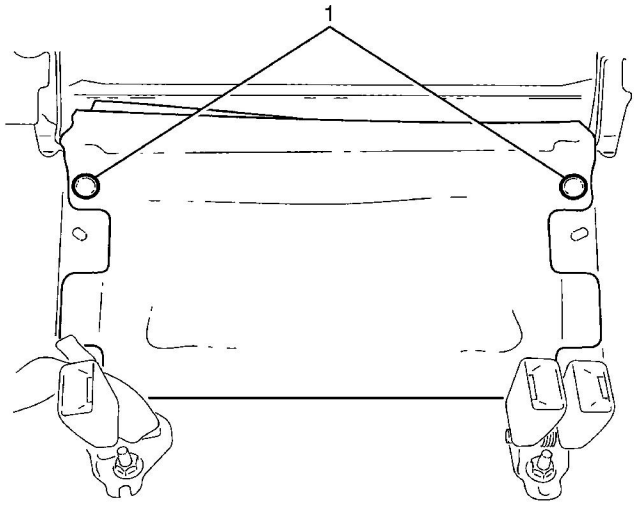

7. Remove the two carpet retainers (1) securing the centre panel carpet.

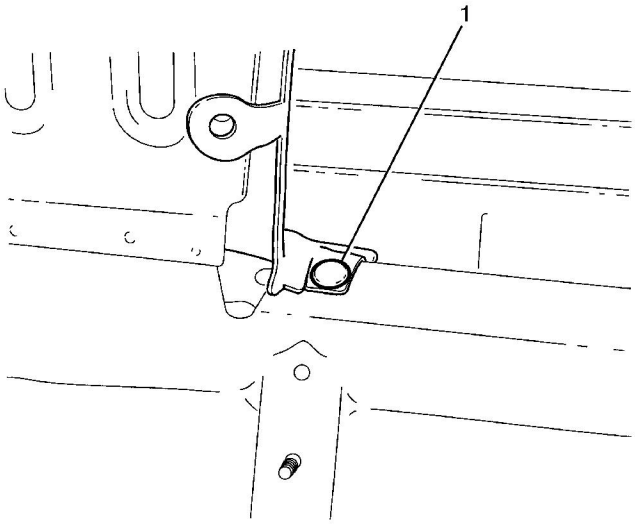

8. Remove the quarter panel side carpet retainer (1) securing the rear quarter panel side carpet.
9. Remove the quarter panel side carpet.
10. Carry out this procedure for the opposite side.

Installation Procedure (From 13 Jun 2007)

1. Install the quarter panel side carpet.

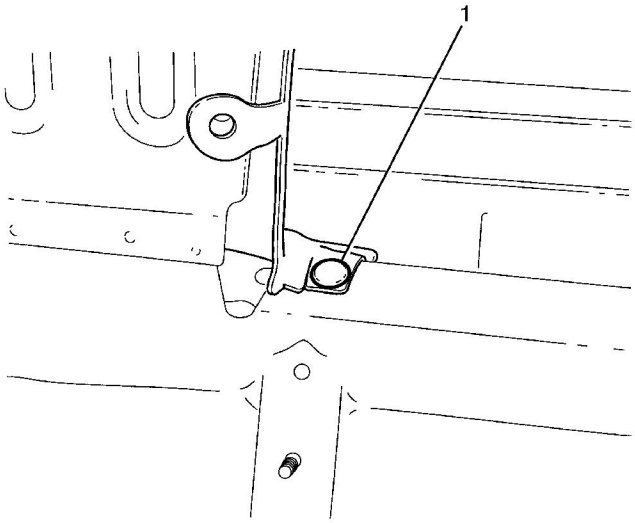

2. Install the quarter panel side carpet retainer (1).

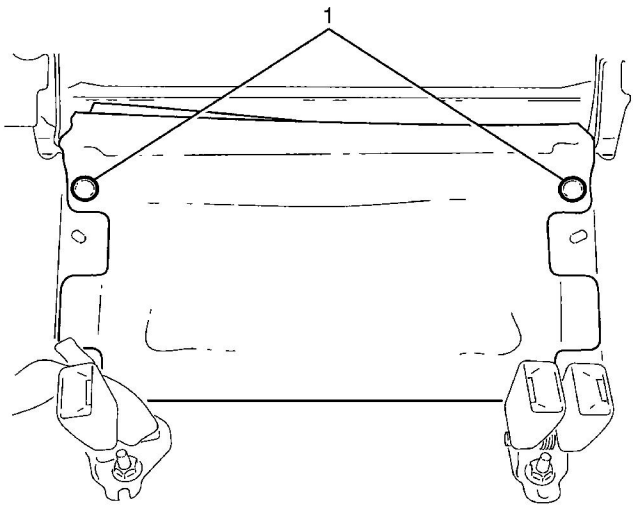

3. Install the two carpet retainers (1) to secure the centre panel carpet.

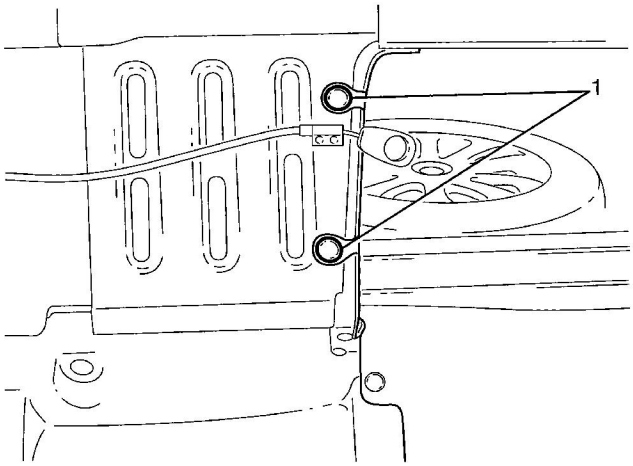

4. Install the two carpet retainers (1) securing the rear quarter panel side carpet.

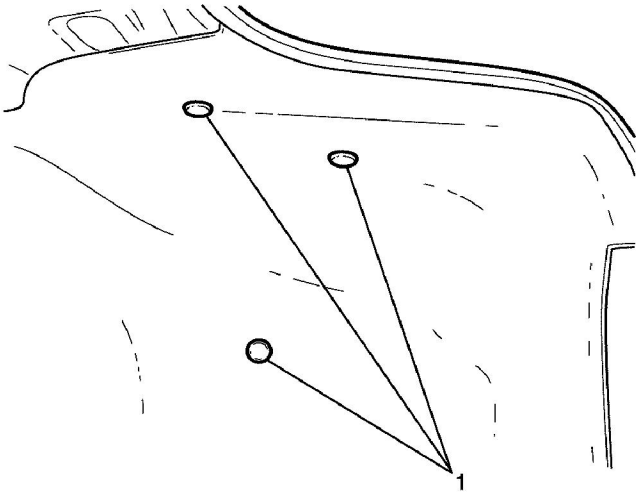

5. Install the three carpet retainers (1) securing the rear quarter panel side carpet.
6. Make sure the carpet has a flush finish with the quarter panel.
7. Install the seat back assembly. Refer to Rear Seat Back Replacement.
8. Install the rear end panel trim. Refer to Rear Compartment Trim Panel Replacement.
9. Install the rear carpet. Refer to Rear Compartment Floor Panel Carpet Replacement.
10. Install the convenience net. (If fitted). Refer to Rear Compartment Stowage Tray Net Replacement..

Assist Handle Replacement

Removal Procedure

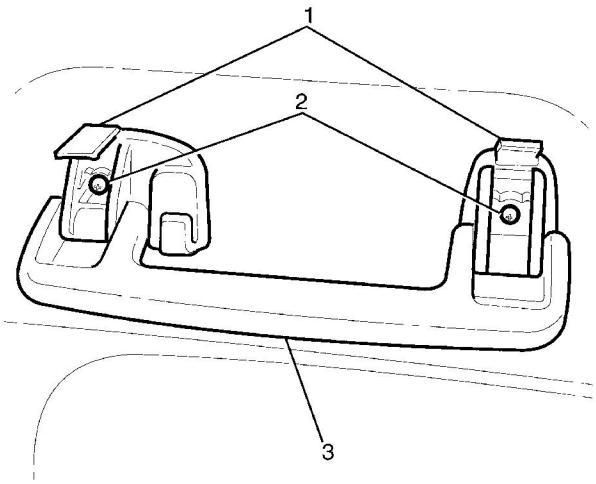

1. Pull the assist handle (3) into the down position.
2. Prise open the assist handle screw covers (1).
3. Remove the two retaining torx screws (2).

Note: When removing the assist handle assembly, take care not to damage the locating pins.

4. Remove the assist handle assembly (3).

Installation Procedure

© 2010 General Motors Corporation. All rights reserved.

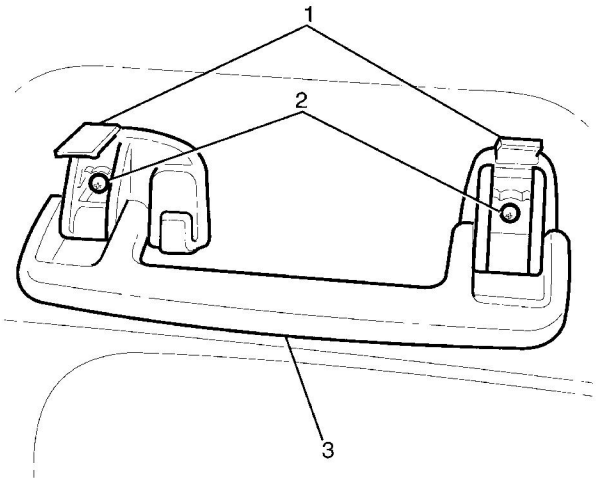

1. Install the assist handle assembly (3) ensuring that the locating pins are correctly aligned with the locating holes and spacer behind the headlining.

Caution: Refer to Fastener Caution in the Preface section.

2. Install the assist handle retaining screws (2) and tighten to **2.0 N·m (18 lb in)**.
3. Close the assist handle screw covers (1).

Sunshade Replacement

Removal Procedure

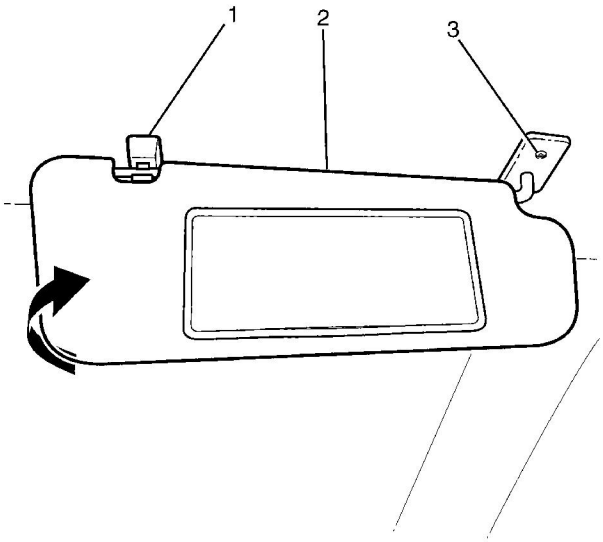

1. Detach the sunshade assembly (2) from the sunshade support (1) and rotate to gain access.
2. Remove the retaining screw (3) attaching the sunshade assembly to the head lining assembly.

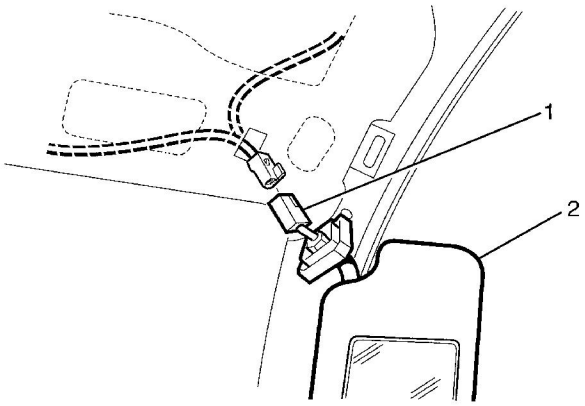

3. Pull the sunshade assembly (2) away from the roof lining assembly and disconnect the sun shade assembly electrical connection (1).

© 2010 General Motors Corporation. All rights reserved.

4. Remove the sunshade assembly (2). The right side is shown, the left side is the same.

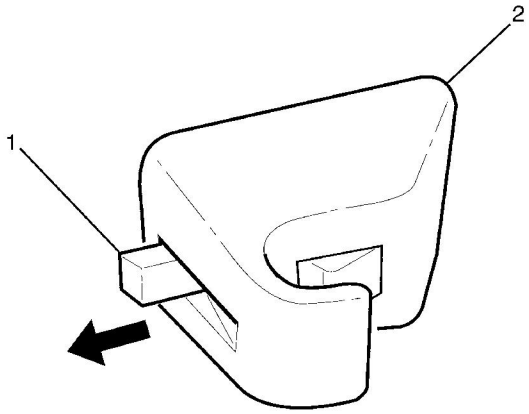

Note: Take care not to loose the sunshade support retaining mechanism and spring.

5. Remove the retaining pin (1) attaching the sunshade support (2) to the sunshade retainer.
6. Remove the sunshade support.

Installation Procedure

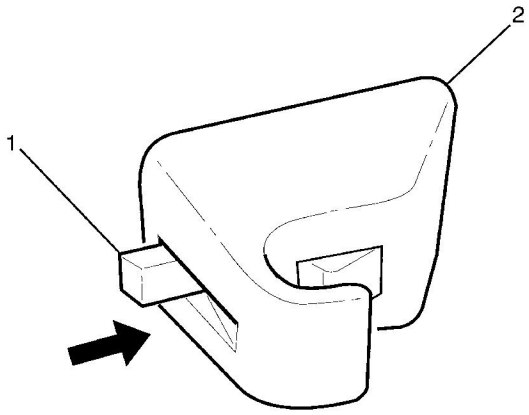

Note: When installing the sunshade, ensure the pivot line is vertical.

1. Install the sunshade support (2) by inserting the sunshade support retaining pin (1).

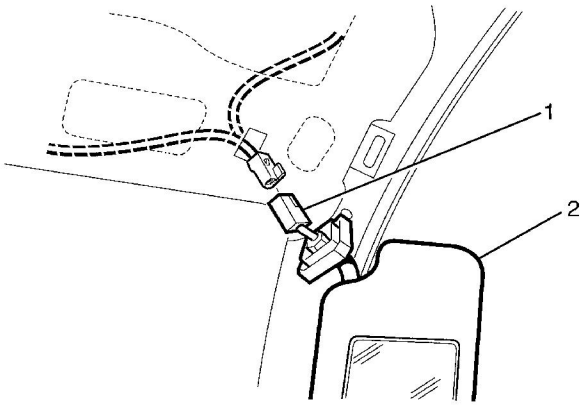

2. Connect the sun shade assembly (2) electrical connector (1).

Caution: Refer to Fastener Caution in the Preface section.

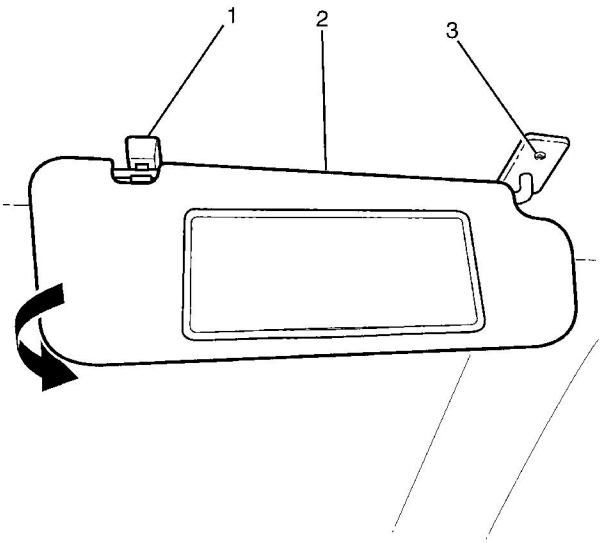

3. Rotate the sunshade assembly (2) and install it into the sunshade support (1) and tighten to **2.0 N·m (18 lb in)**.
4. Install the sunshade assembly (2) into the sunshade support (1).
5. Test sunshade for correct operation.

Sunshade Retainer Bezel Replacement

Removal Procedure

1. Remove the sunshade assembly. Refer to Sunshade Replacement.

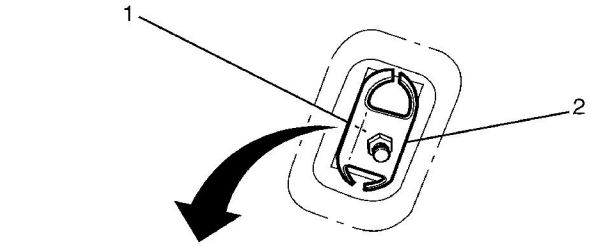

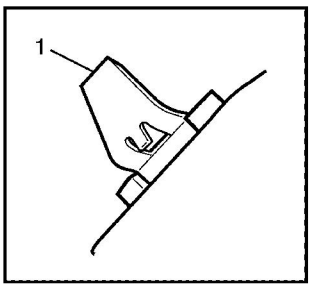

2. Using a suitable screwdriver, release the retaining tabs (1) on the retainer (2).
3. Remove the retainer (2).

Installation Procedure

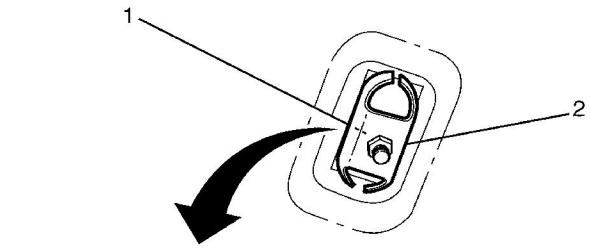

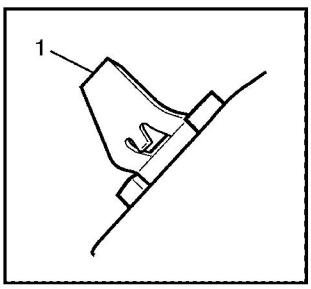

© 2010 General Motors Corporation. All rights reserved.

1. Install the sunshade retainer (2) by inserting the retaining tabs (1) into the roof panel, listen for an audible click to confirm fitting.
2. Install the sunshade assembly. Refer to Sunshade Replacement.

Windshield Pillar Garnish Molding Replacement

Removal Procedure

Caution: Refer to Glass and Sheet Metal Handling Warning in the Preface section.

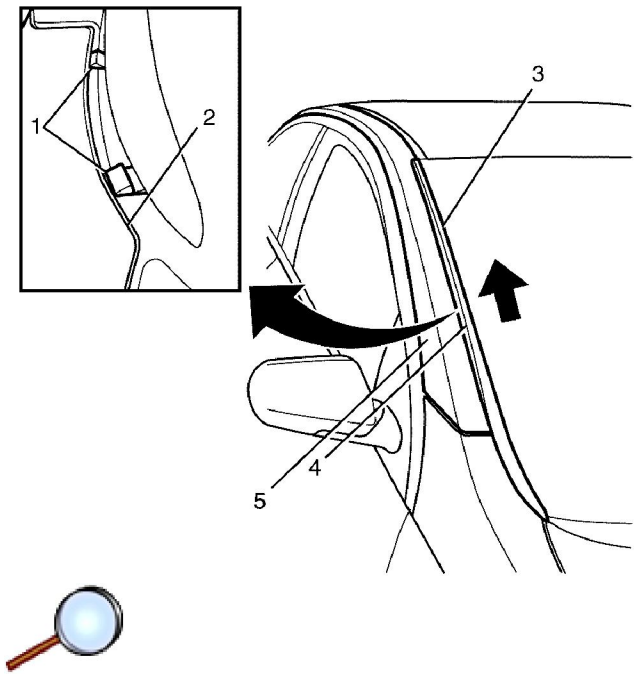

Note: Take necessary precautions so as not to damage the vehicle's painted exterior surfaces whilst removing the windshield pillar garnish moulding from the vehicle's windshield pillar.

1. Using a suitable tool, carefully disengage the windshield pillar garnish moulding retaining tabs (1) from the fender edge (2).
2. Carefully peel the upper length of the windshield pillar garnish moulding (3) out of the windshield seam (4) on the windshield pillar (5).
3. Remove the windshield pillar garnish moulding (3).

Installation Procedure

© 2010 General Motors Corporation. All rights reserved.

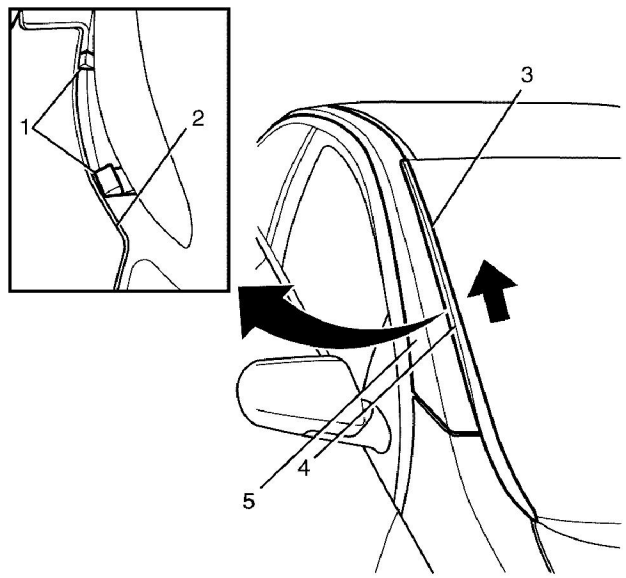

Note: The windshield pillar garnish moulding is malleable during installation. Care must be taken not to over extend the windshield pillar garnish moulding during installation or damage may result.

Note: The windshield pillar garnish moulding must be located correctly in the windshield seam to reduce any chance of dislocation.

1. Locate the windshield pillar garnish moulding retaining tabs (1) underneath the fender edge (2) and engage.
2. Feed the upper length of the windshield pillar garnish moulding (3) into the windshield seam (4) on the windshield pillar (5).
3. Check the windshield pillar garnish moulding for correct fitment.

Center Pillar Upper Trim Panel Replacement

Removal Procedure

1. Remove the centre pillar lower trim. Refer to Center Pillar Lower Trim Panel Replacement.
2. Remove the lower seat belt bolt. Refer to Front Seat Belt Replacement.

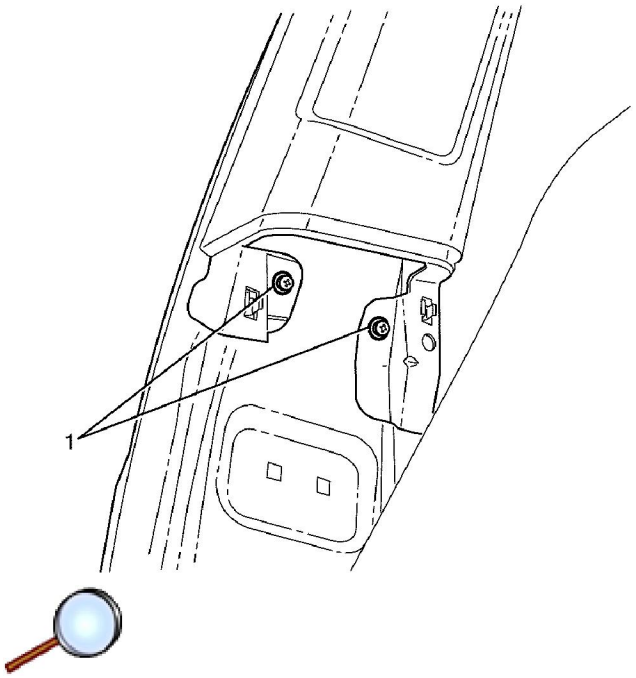

3. Remove the centre trim panel retaining torx screws (1).

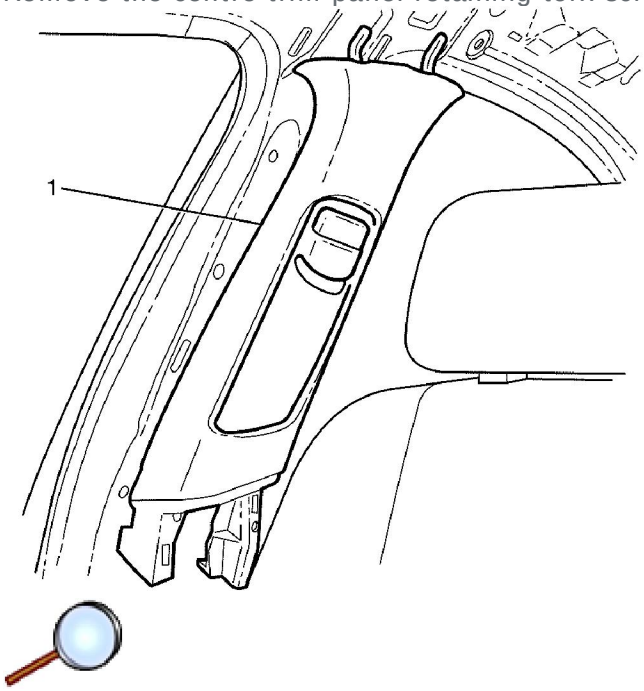

4. Detach the trim panel (1) from the B pillar by pulling inwards then downwards.

Installation Procedure

© 2010 General Motors Corporation. All rights reserved.

1. Move height adjuster to the upper position.
2. Move B pillar slide to the upper position.

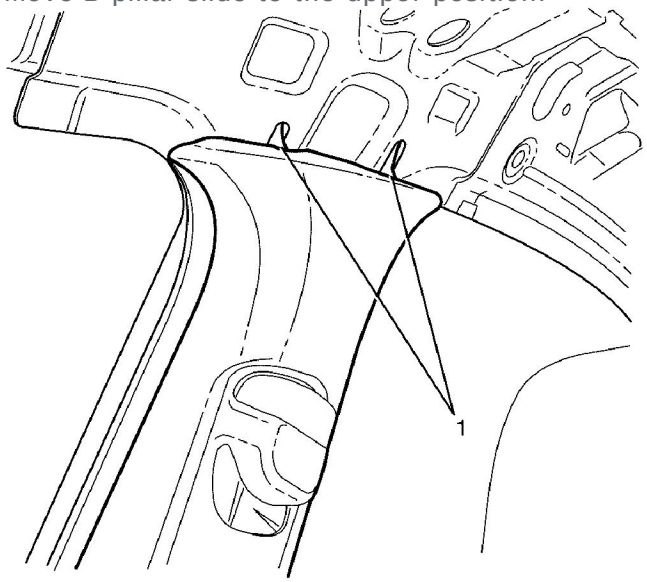

3. Install the trim panel, by inserting the locating pins (1) into the roof panel first.
4. Line up pin on trim to slot in height adjuster.
5. Ensure main datum pin is correctly assembled into the datum hole.

Caution: Refer to Fastener Caution in the Preface section.

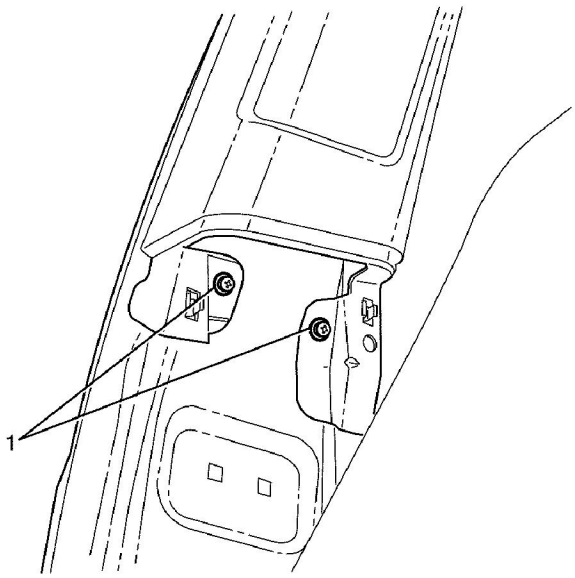

6. Install the centre trim panel retaining torx screws (1) and tighten to **2.0 N·m (18 lb in)**.
7. Install the lower seat belt bolt. Refer to Front Seat Belt Replacement.
8. Install the centre pillar lower trim. Refer to Center Pillar Lower Trim Panel Replacement.

Center Pillar Lower Trim Panel Replacement

Removal Procedure

1. Partially detach the weatherstrip. Refer to Front Door Opening Weatherstrip Replacement.
2. Partially detach the weatherstrip. Refer to Rear Door Opening Weatherstrip Replacement.

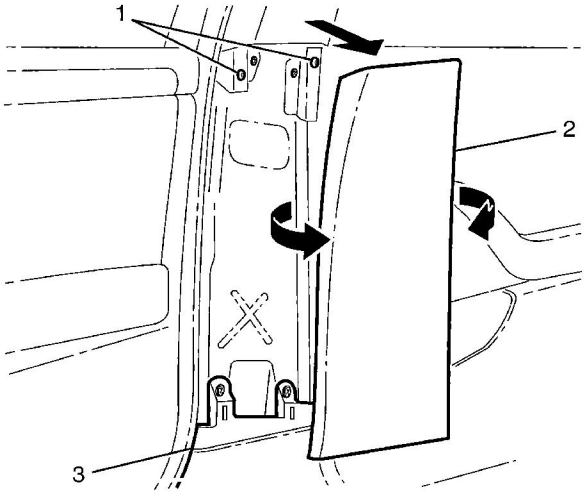

3. Grasp both sides at the top of the trim panel (2) and while spreading, pull away from the door opening, disengaging the trim clip (1).
4. Pull the trim panel inward out of the lower sill trim panel (3) and remove.

Installation Procedure

© 2010 General Motors Corporation. All rights reserved.

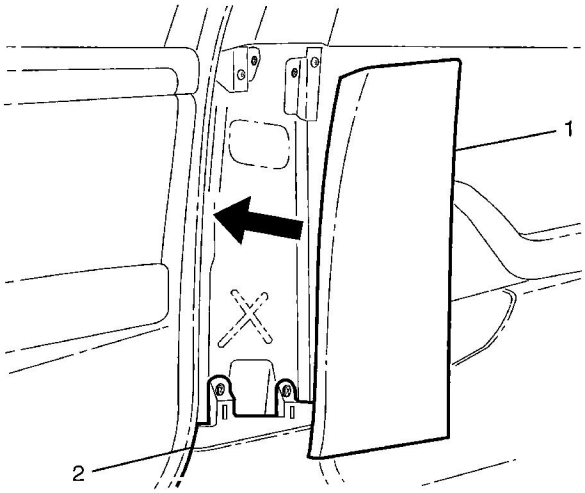

1. Install the top edge of the centre trim panel (1) into upper sill trim panel.

   Important: Make sure datum pins on the lower trim panel (2) line up with the hole on the upper trim.

2. Firmly push in lower section of the trim panel (1).
3. Attach the weatherstrip. Refer to Rear Door Opening Weatherstrip Replacement.
4. Attach the weatherstrip. Refer to Front Door Opening Weatherstrip Replacement.

Quarter Upper Trim Panel Replacement

Removal Procedure

1. Remove the seat back assembly. Refer to Front Seat Back Replacement.
2. Remove the seat belt lower retaining bolt. Refer to Front Seat Belt Replacement.
3. Remove the trim panel - rear quarter lower. Refer to Quarter Lower Rear Trim Panel Replacement.

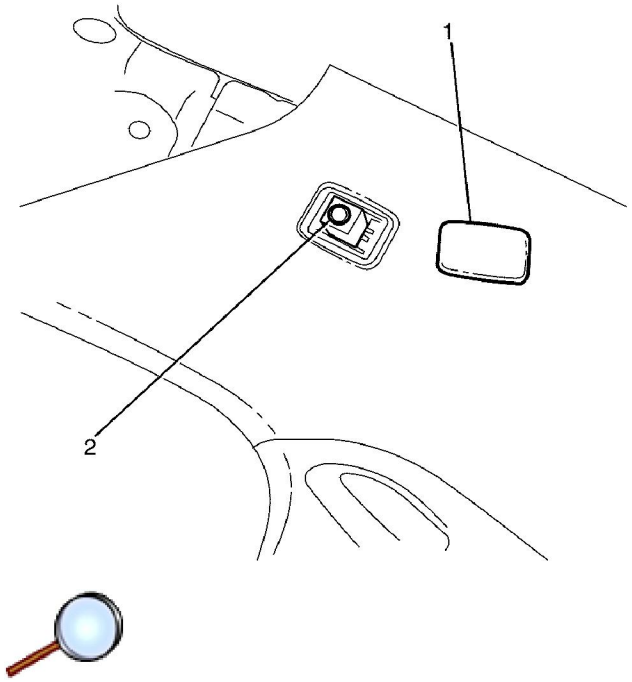

4. Remove the retaining torx screw cover (1).
5. Remove the upper quarter trim panel retaining torx screw (2).

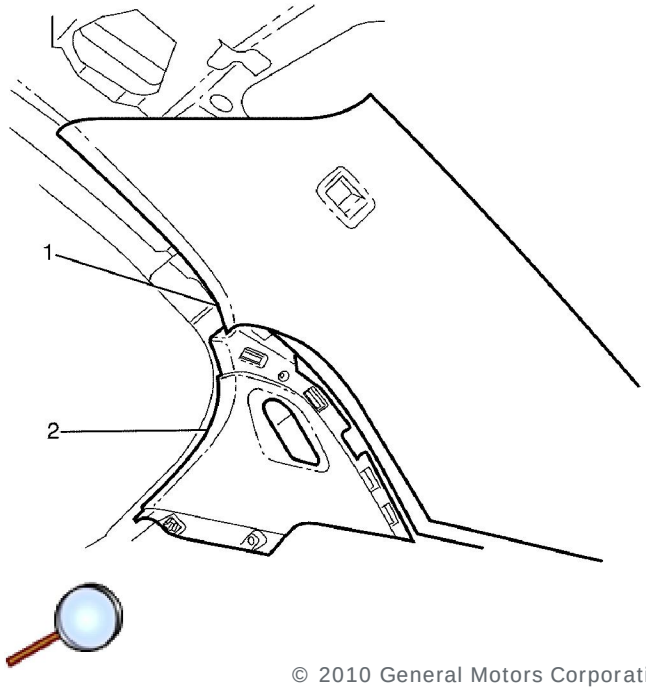

© 2010 General Motors Corporation. All rights reserved.

6. Working from the top of the upper quarter trim panel (1) disengage the retaining trim clips from the lower section (2).

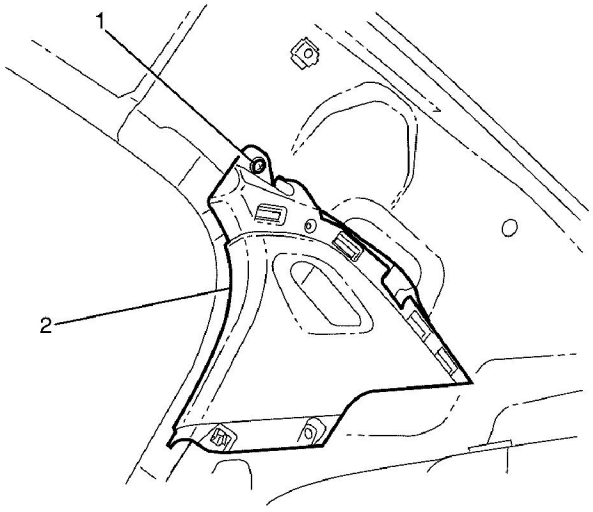

7. Remove the lower section retaining torx screw (1).
8. Remove the trim panel (2).

Installation Procedure

Caution: Refer to Fastener Caution in the Preface section.

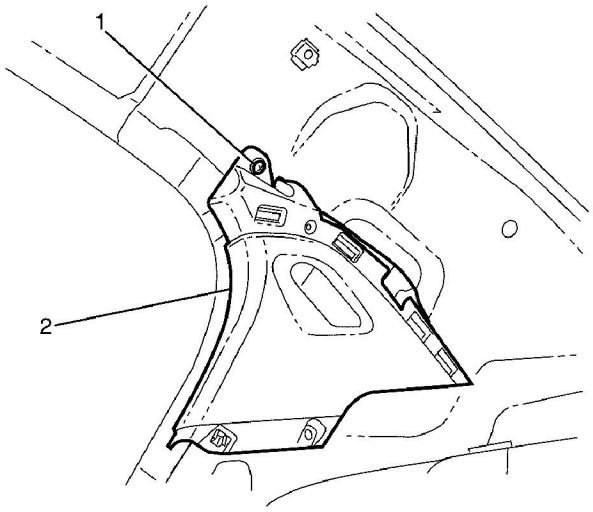

Note: When installing the upper quarter panel trim, ensure that the seat belt is correctly fed through the seat belt access hole.

1. Install the lower section of the upper quarter trim panel (2) and tighten to **2.0 N·m (18 lb in)**.

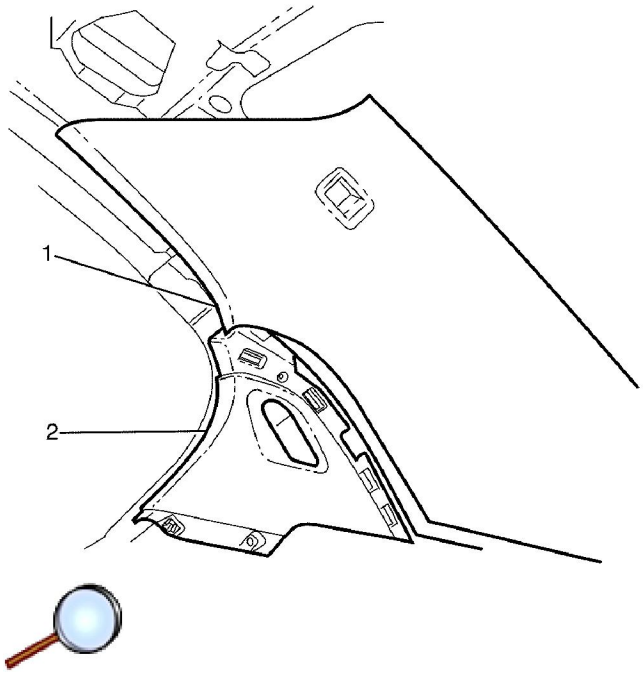

Note: Make sure datum pins on the upper trim line up with the hole on the mid trim.

2. Install the upper quarter trim panel (1) by firmly pushing it into the lower section of the trim panel (2).

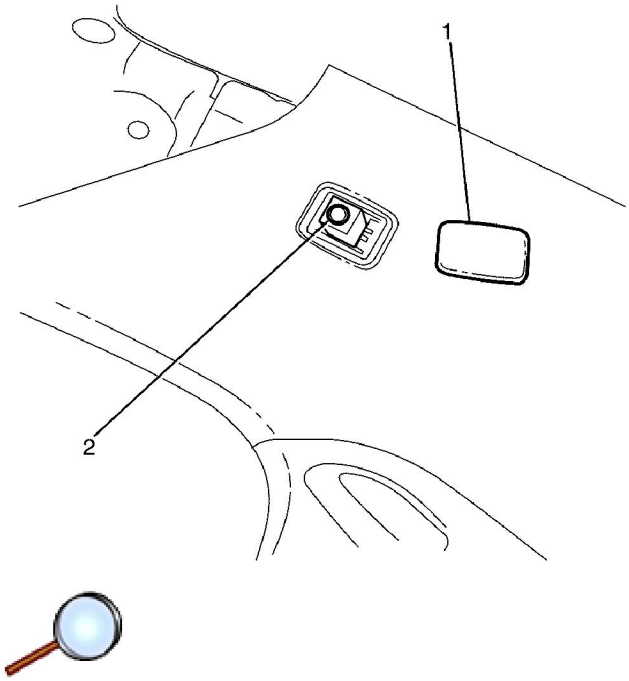

3. Install the upper quarter panel retaining torx screw (2) and tighten to **2.0 N·m (18 lb in)**.
4. Install the retaining torx screw cover (1).
5. Install the seat belt lower retaining bolt. Refer to Front Seat Belt Replacement.
6. Install the seat back assembly. Refer to Rear Seat Back Replacement.
7. Attach the rear door weatherstrip. Refer to Rear Door Opening Weatherstrip Replacement.

Quarter Lower Rear Trim Panel Replacement

Removal Procedure

1. Remove the seat cushion. Refer to Rear Seat Cushion Replacement.
2. Remove the seat back assembly. Refer to Rear Seat Back Replacement.
3. Remove the rear sill trim panel. Refer to Rear Side Door Sill Plate Replacement.

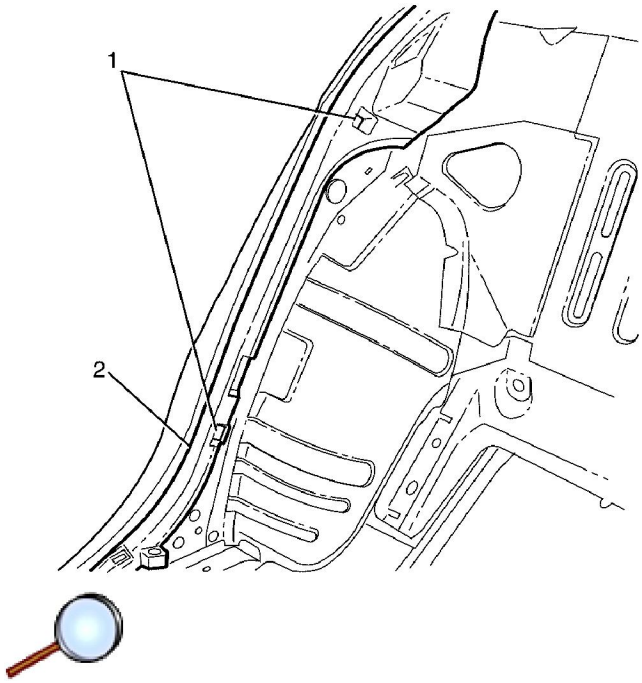

Important: When removing the trim take care not to damage the locating pins.

4. Carefully disengage the retaining trim clips (1) and remove the trim (2).

Installation Procedure

© 2010 General Motors Corporation. All rights reserved.

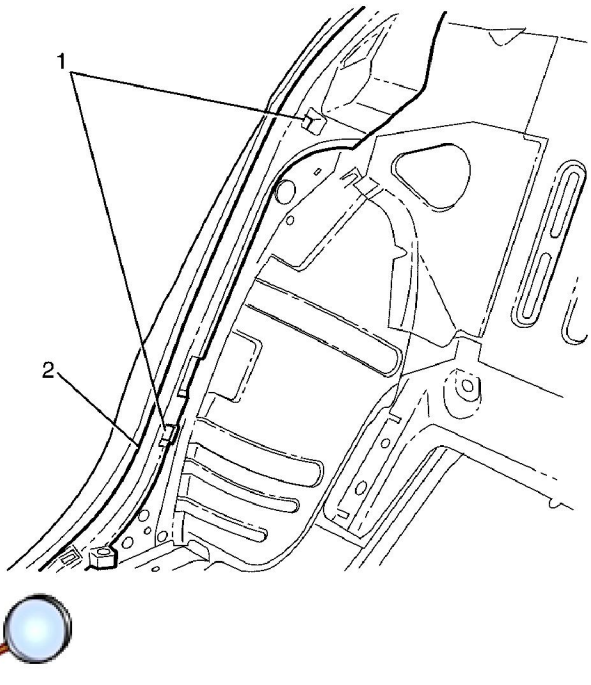

Important: When installing the lower quarter trim panel, ensure the retaining clips are correctly aligned with the retainers before installation.

1. Carefully install the lower quarter trim panel (2) by engaging the retaining clips (1).

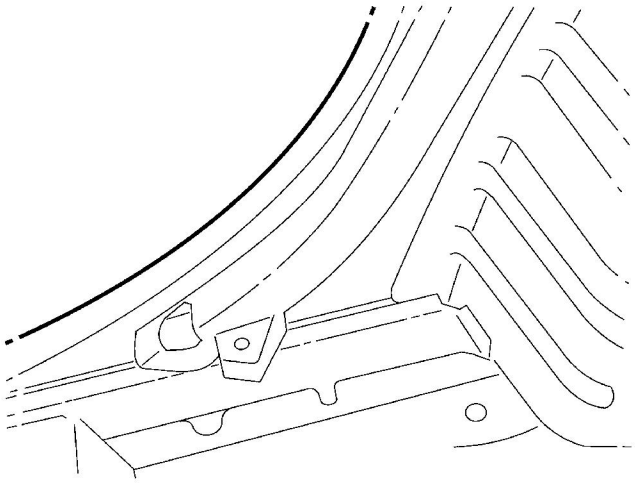

2. Install the lower quarter panel.
3. Install the rear sill trim panel. Refer to Rear Side Door Sill Plate Replacement.
4. Install the seat back assembly. Refer to Rear Seat Back Replacement.
5. Install the seat cushion. Refer to Rear Seat Cushion Replacement.

Rear Window Shelf Trim Panel Replacement

Removal Procedure

1. Remove the rear seat cushion. Refer to Rear Seat Cushion Replacement.
2. Remove the seat back assembly. Refer to Rear Seat Back Replacement.
3. Remove the centre seat back assembly. Refer to Rear Split Folding Seat Back Replacement
4. Remove the upper quarter trim panel. Refer to Quarter Upper Trim Panel Replacement.
5. Remove the centre seat belt lower retaining bolt. Refer to Seat Belt Replacement - Center Rear.

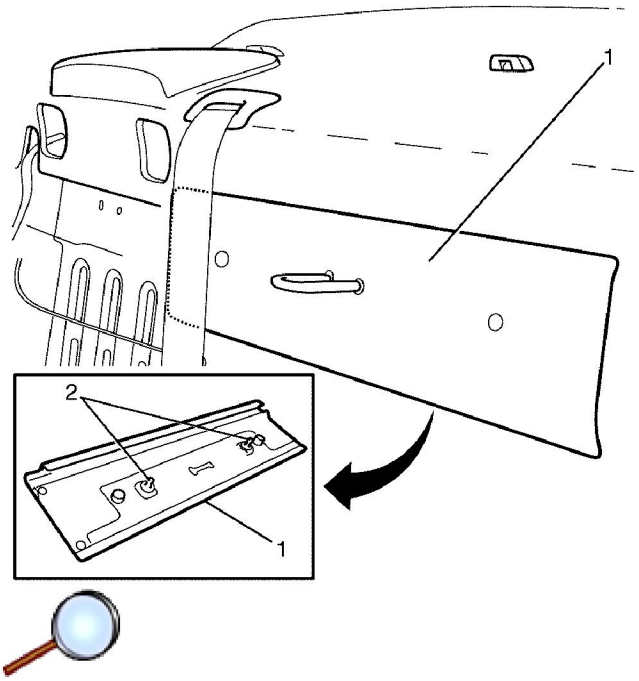

6. With a suitable tool carefully pry the rear lock striker trim panel (1) in the area of the rear lock striker trim panel to body retaining clips (2). Disengage the rear lock striker trim panel (1) with a suitable tool.
7. Remove the rear lock striker trim panel (1) from the vehicle.
8. Remove the child seat tether assemblies. Refer to Child Restraint Tether Anchor Replacement.

© 2010 General Motors Corporation. All rights reserved.

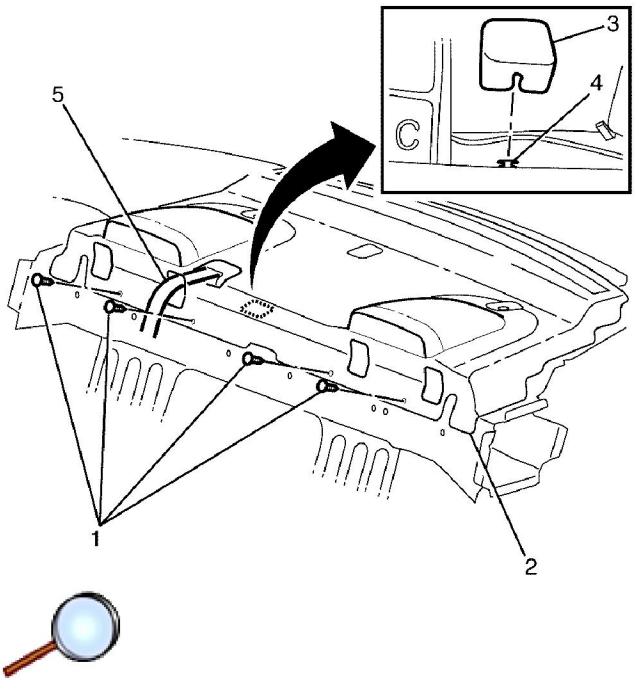

9. Remove the rear window trim panel to body retaining clips (1).
10. At the centre pull the rear window shelf trim panel (2) forward and then lift to disengage the datum tower (3) from the retaining clip (4).
11. Slide the centre seat belt (5) through the centre seat belt slot and remove the rear window shelf trim panel (2) from the vehicle.

Installation Procedure

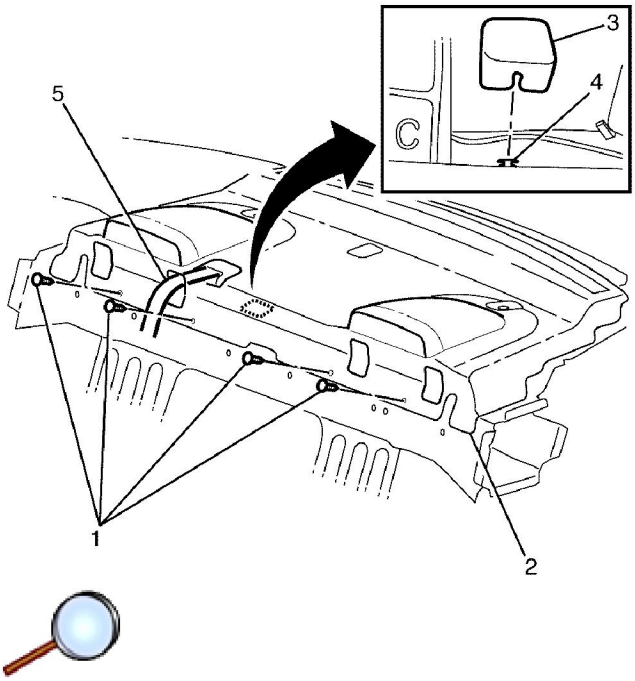

1. Install the centre seat belt (5) by sliding the belt through the centre seat belt slot.

Important: Ensure that the datum tower (3) engages the retaining clip (4) correctly.

2. Push the rear window shelf trim panel (2) back into position while gently pressing down at the front of the rear window shelf trim panel to engage the datum tower (3) to the retaining clip (4).
3. Install the rear window trim panel to body retaining clips (1).
4. Install the child seat anchor assemblies (1). Refer to Child Restraint Tether Anchor Replacement.

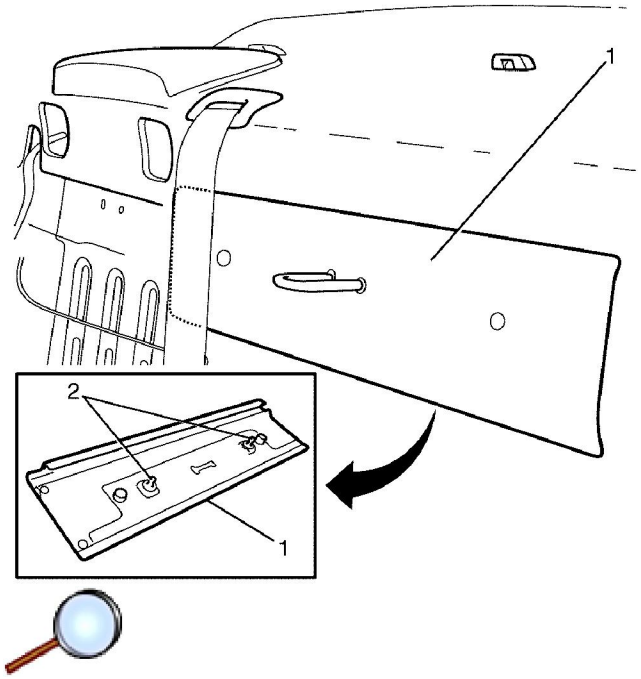

5. Align the clips 2 and install the rear lock striker trim panel (1) to the vehicle. Listen for an audible click to confirm correct fitment of the rear lock striker trim panel (1).
6. Install the centre seat belt lower retaining bolt. Refer to Front Seat Belt Replacement.
7. Install the upper quarter trim panel. Refer to Quarter Upper Trim Panel Replacement.
8. Install the centre seat back assembly. Refer to Rear Split Folding Seat Back Replacement.
9. Install the seat back assembly. Refer to Rear Seat Back Replacement.
10. Install the rear seat cushion.

Rear Compartment Lid Inner Panel Trim Replacement

Removal Procedure

1. Open the luggage compartment lid.

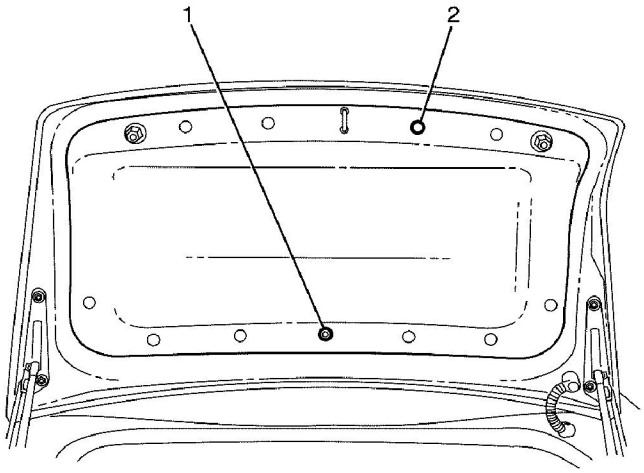

2. Remove the retaining screw (1) attaching the cargo compartment carpet retaining stay to the luggage compartment lid.
3. Remove the luggage compartment lid trim retaining clips (2).
4. Remove the luggage compartment lid trim.

Installation Procedure

1. Install the luggage compartment lid trim.

© 2010 General Motors Corporation. All rights reserved.

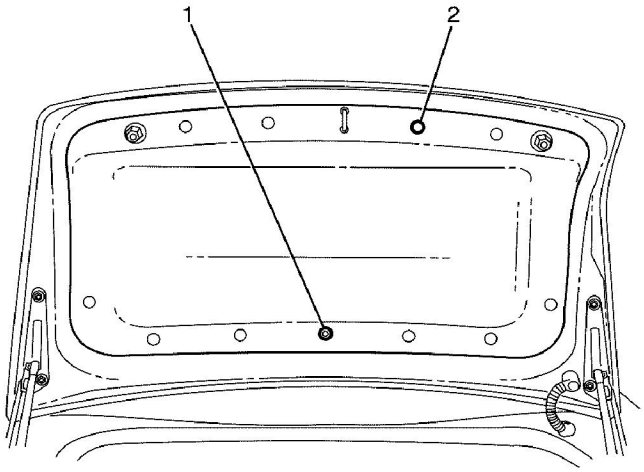

2. Install the luggage compartment lid trim retaining clips (2).
3. Install the luggage compartment carpet stay and retaining screw (1).
4. Close the luggage compartment lid.

Rear Compartment Stowage Tray Net Replacement

Removal Procedure

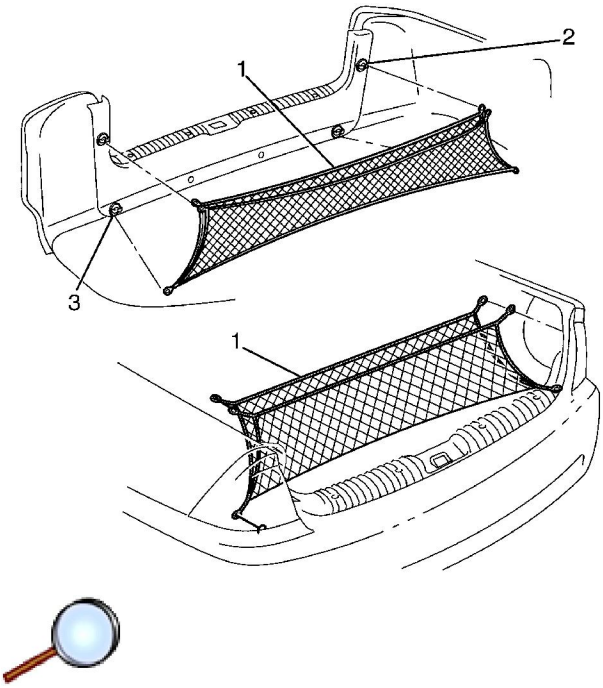

1. Carefully unhook the convenience net (1) from the two lower retainer hooks (3) and the two upper retainer hooks (2).
2. Remove the convenience net from the rear compartment trim assembly.
3. If required, unscrew the two upper and two lower retainer hooks.

Installation Procedure

© 2010 General Motors Corporation. All rights reserved.

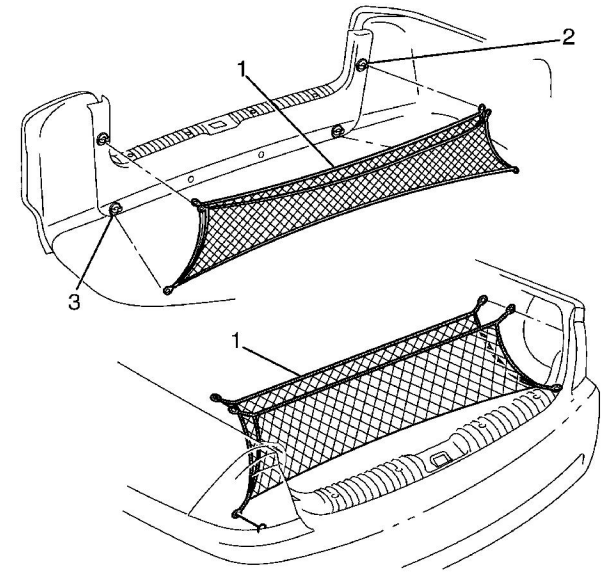

1. If removed install the upper and lower retainer hooks (2 and 3).
2. Install the convenience (1) net to the rear compartment end panel.

Pressure Relief Valve Replacement

Removal Procedure

1. Remove the rear compartment floor panel carpet. Refer to Rear Compartment Floor Panel Carpet Replacement .
2. Remove the rear compartment side trim panel. Refer to Rear Compartment Side Trim Panel Replacement .
3. Remove the battery. Refer to Battery Replacement .
4. Remove the batter tray. Refer to Battery Tray Replacement .
5. Remove the rear bumper fascia. Refer to Rear Bumper Fascia Replacement .

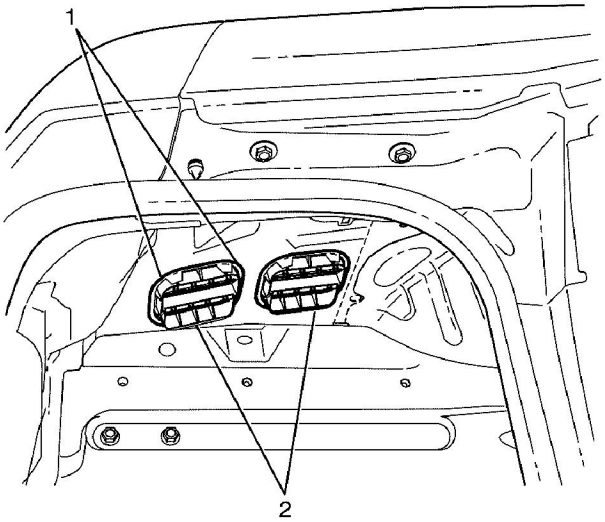

6. From inside the rear compartment, press the retaining tabs (1) while pushing outward in order to release the pressure relief valve (2) from the rear quarter panel.

Installation Procedure

© 2010 General Motors Corporation. All rights reserved.

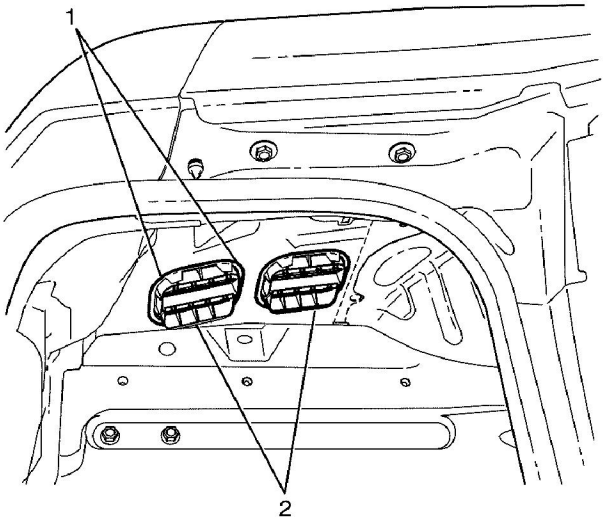

1. Position the pressure relief valve (2) to the opening in the rear quarter panel.
2. Press inward on the pressure relief valve until the retaining tabs (1) engage to secure the pressure relief valve (2) to the rear quarter panel.
3. Install the rear bumper fascia. Refer to Rear Bumper Fascia Replacement .
4. Install the battery tray. Refer to Battery Tray Replacement .
5. Install the battery. Refer to Battery Replacement .
6. Install the rear compartment side trim panel. Refer to Rear Compartment Side Trim Panel Replacement .
7. Install the rear compartment floor panel carpet. Refer to Rear Compartment Floor Panel Carpet Replacement .